
1968 AMC MARLIN & AMBASSADOR

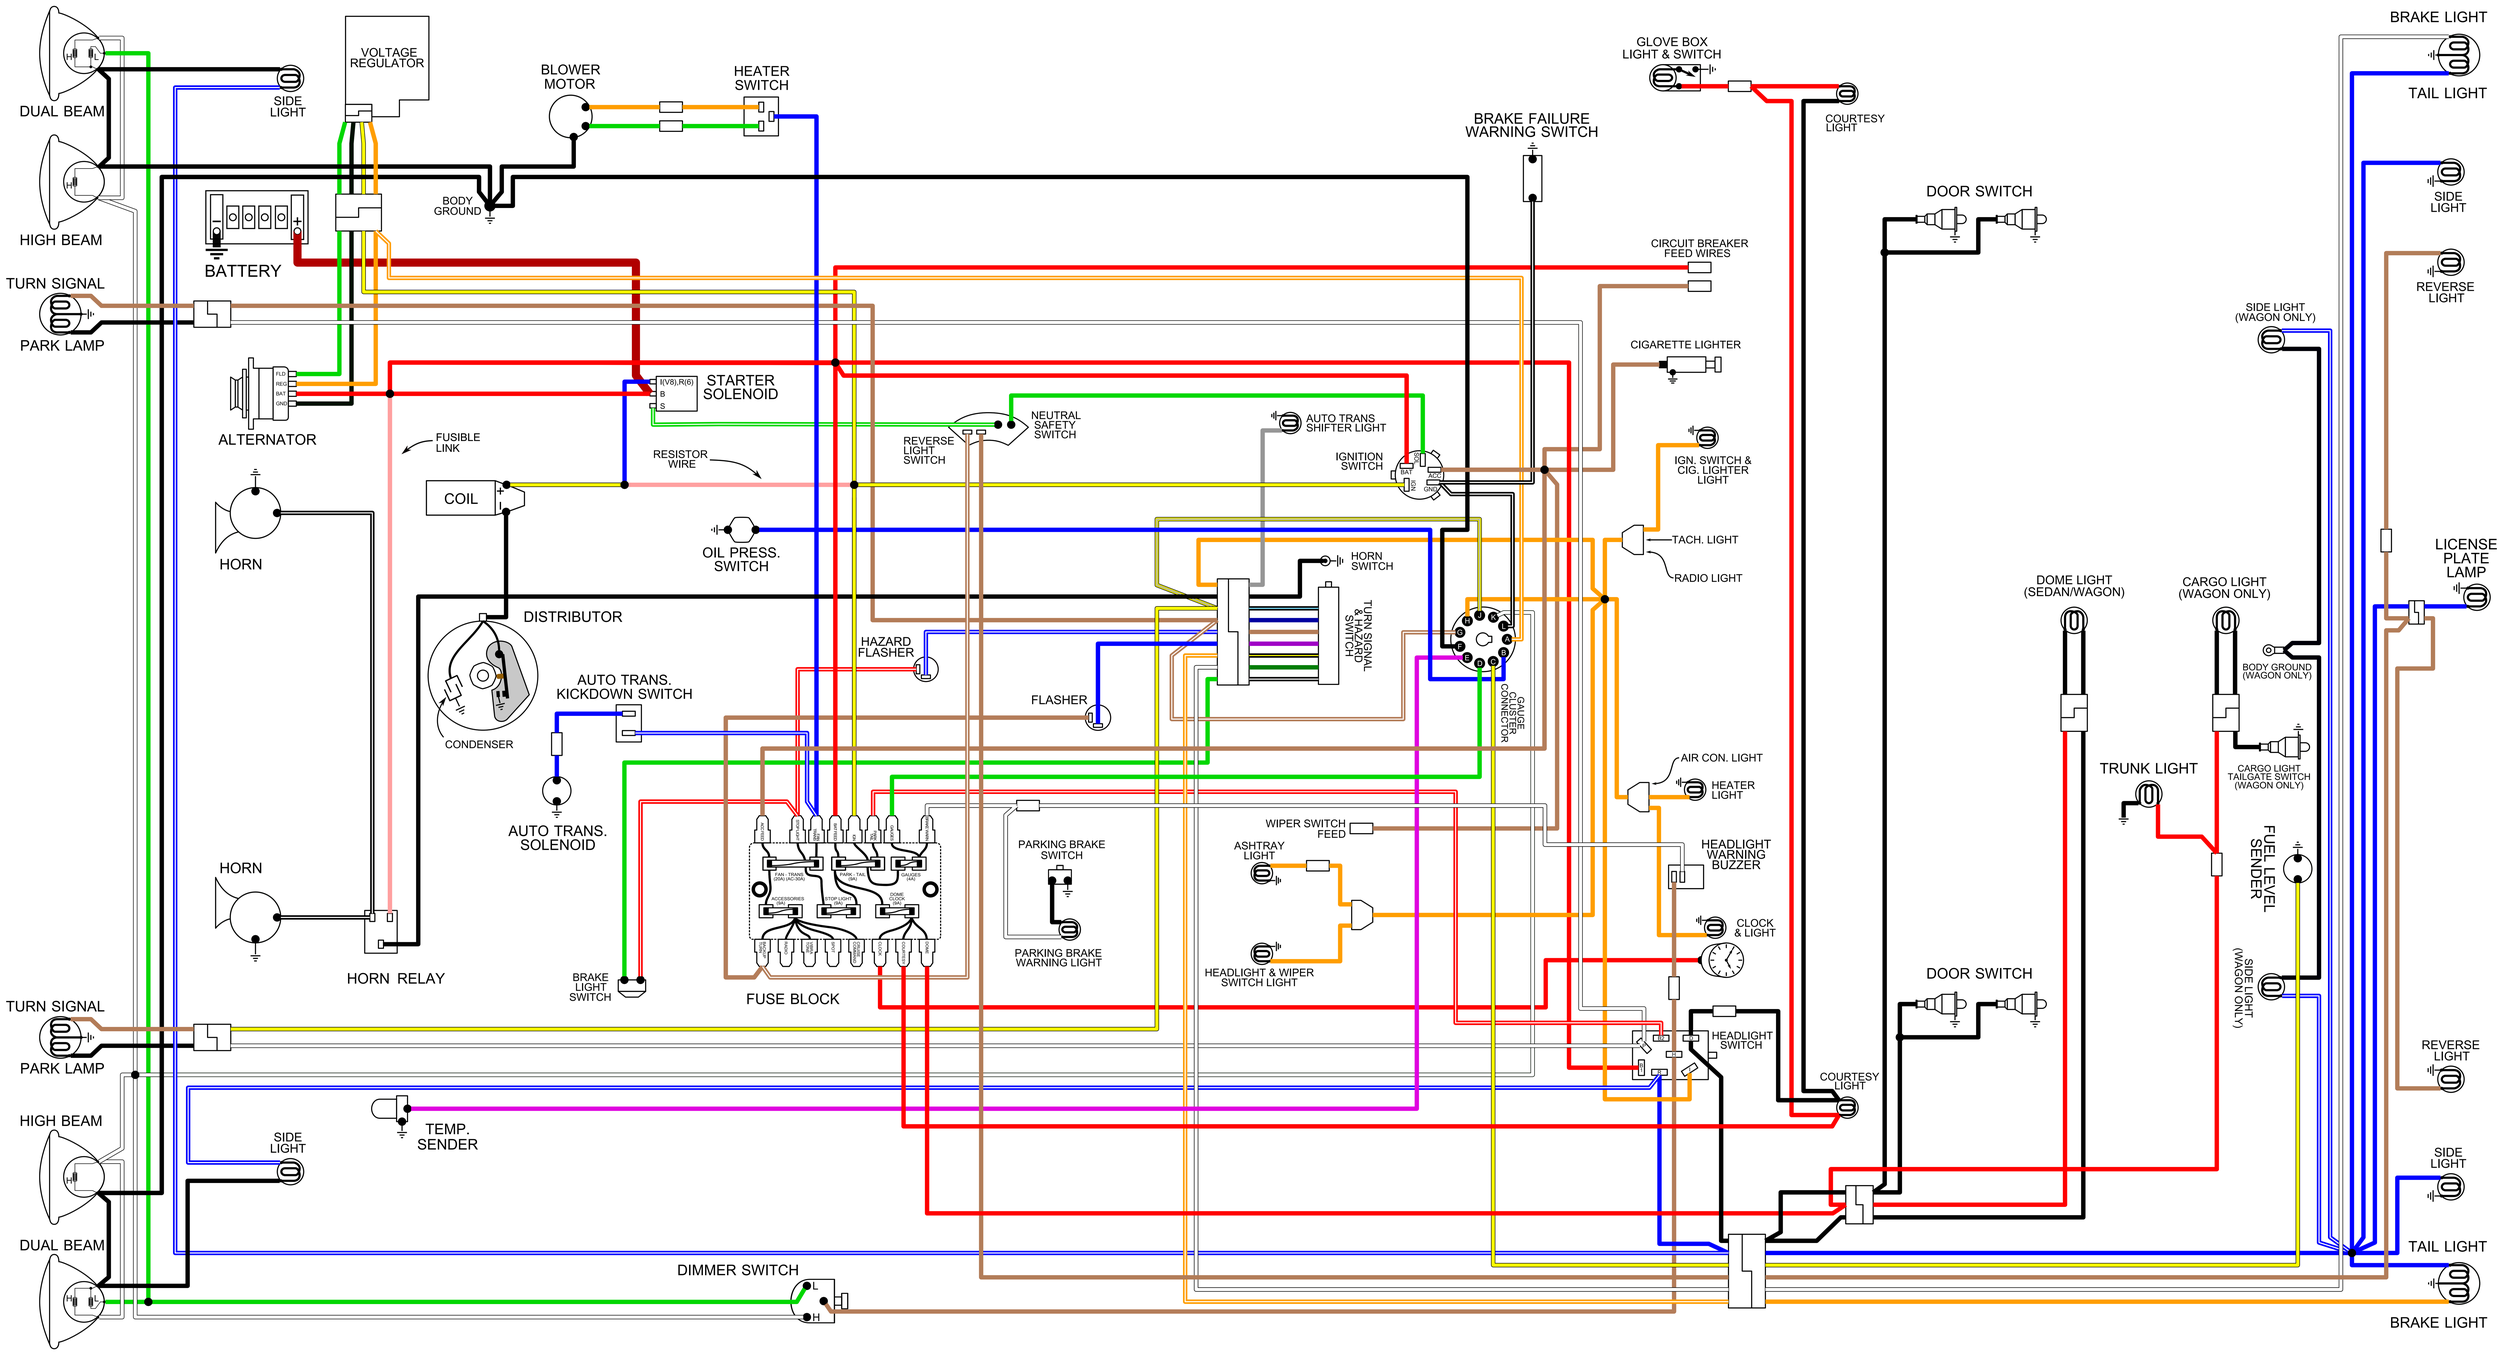

CINCO

1968 AMC MARLIN & AMBASSADOR

MAIN POWER

DUAL BEAM
HIGH BEAM
TURN SIGNAL
PARK LAMP
SIDE LIGHT
VOLTAGE REGULATOR
BLOWER MOTOR
HEATER SWITCH
BODY GROUND
BATTERY
ALTERNATOR
FLD
REG
BAT
GND
I(V8),R(6)
B
S
STARTER SOLENOID
FUSIBLE LINK
COIL
HORN
OIL PRESS. SWITCH
REVERSE LIGHT SWITCH
NEUTRAL SAFETY SWITCH
AUTO TRANS SHIFTER LIGHT
IGNITION SWITCH
BAT
IGN
ACC
START
HORN SWITCH
TURN SIGNAL & HAZARD SWITCH
GAUGE CLUSTER CONNECTOR
DISTRIBUTOR
CONDENSER
AUTO TRANS. KICKDOWN SWITCH
HAZARD FLASHER
FLASHER
AUTO TRANS. SOLENOID
HORN
HORN RELAY
BRAKE LIGHT SWITCH
FUSE BLOCK
PARKING BRAKE SWITCH
PARKING BRAKE WARNING LIGHT
WIPER SWITCH FEED
ASHTRAY LIGHT
HEADLIGHT & WIPER SWITCH LIGHT
BRAKE FAILURE WARNING SWITCH
GLOVE BOX LIGHT & SWITCH
COURTESY LIGHT
CIRCUIT BREAKER FEED WIRES
CIGARETTE LIGHTER
IGN. SWITCH & CIG. LIGHTER LIGHT
TACH. LIGHT
RADIO LIGHT
HEATER LIGHT
HEADLIGHT WARNING BUZZER
CLOCK & LIGHT
HEADLIGHT SWITCH
DOOR SWITCH
DOME LIGHT (SEDAN/WAGON)
CARGO LIGHT (WAGON ONLY)
BODY GROUND (WAGON ONLY)
CARGO LIGHT TAILGATE SWITCH (WAGON ONLY)
TRUNK LIGHT
FUEL LEVEL SENDER
SIDE LIGHT (WAGON ONLY)
BRAKE LIGHT
TAIL LIGHT
SIDE LIGHT
REVERSE LIGHT
LICENSE PLATE LAMP
TEMP. SENDER
DIMMER SWITCH
L
H

TURN SIGNAL
PARK LAMP
HIGH BEAM
DUAL BEAM
SIDE LIGHT
HORN
DOOR SWITCH
REVERSE LIGHT
SIDE LIGHT
TAIL LIGHT
BRAKE LIGHT

CINCO


1968 AMC MARLIN & AMBASSADOR
ACCESSORY POWER

DUAL BEAM
HIGH BEAM
TURN SIGNAL
PARK LAMP
SIDE LIGHT
VOLTAGE REGULATOR
BLOWER MOTOR
HEATER SWITCH
BODY GROUND
BATTERY
ALTERNATOR
STARTER SOLENOID
HORN
COIL
OIL PRESS. SWITCH
DISTRIBUTOR
CONDENSER
AUTO TRANS. KICKDOWN SWITCH
AUTO TRANS. SOLENOID
HAZARD FLASHER
FLASHER
REVERSE LIGHT SWITCH
NEUTRAL SAFETY SWITCH
HORN SWITCH
TURN SIGNAL & HAZARD SWITCH
GAUGE CLUSTER CONNECTOR
FUSE BLOCK
PARKING BRAKE SWITCH
PARKING BRAKE WARNING LIGHT
ASHTRAY LIGHT
WIPER SWITCH FEED
HEADLIGHT & WIPER SWITCH LIGHT
BRAKE FAILURE WARNING SWITCH
GLOVE BOX LIGHT & SWITCH
COURTESY LIGHT
DOOR SWITCH
CIRCUIT BREAKER FEED WIRES
CIGARETTE LIGHTER
FROM BATTERY
AUTO TRANS SHIFTER LIGHT
IGNITION SWITCH
IGN. SWITCH & CIG. LIGHTER LIGHT
TACH. LIGHT
RADIO LIGHT
HEATER LIGHT
HEADLIGHT WARNING BUZZER
CLOCK & LIGHT
HEADLIGHT SWITCH
COURTESY LIGHT
DOOR SWITCH
SIDE LIGHT (WAGON ONLY)
BRAKE LIGHT
TAIL LIGHT
SIDE LIGHT
REVERSE LIGHT
LICENSE PLATE LAMP
DOME LIGHT (SEDAN/WAGON)
CARGO LIGHT (WAGON ONLY)
BODY GROUND (WAGON ONLY)
TRUNK LIGHT
CARGO LIGHT TAILGATE SWITCH (WAGON ONLY)
FUEL LEVEL SENDER
SIDE LIGHT (WAGON ONLY)
REVERSE LIGHT
SIDE LIGHT
TAIL LIGHT
BRAKE LIGHT
HORN
HORN RELAY
BRAKE LIGHT SWITCH
TURN SIGNAL
PARK LAMP
HIGH BEAM
DUAL BEAM
SIDE LIGHT
TEMP. SENDER
DIMMER SWITCH


1968 AMC MARLIN & AMBASSADOR
IGNITION SYSTEM

DUAL BEAM
HIGH BEAM
TURN SIGNAL
PARK LAMP
SIDE LIGHT
VOLTAGE REGULATOR
BLOWER MOTOR
HEATER SWITCH
BODY GROUND
BATTERY
ALTERNATOR
HORN
STARTER SOLENOID
I(V8),R(6)
B
S
RESISTOR WIRE
COIL
DISTRIBUTOR
CONDENSER
AUTO TRANS. KICKDOWN SWITCH
AUTO TRANS. SOLENOID
OIL PRESS. SWITCH
REVERSE LIGHT SWITCH
NEUTRAL SAFETY SWITCH
FROM BATTERY
AUTO TRANS SHIFTER LIGHT
IGNITION SWITCH
HORN SWITCH
TURN SIGNAL & HAZARD SWITCH
HAZARD FLASHER
FLASHER
GAUGE CLUSTER CONNECTOR
FUSE BLOCK
PARKING BRAKE SWITCH
PARKING BRAKE WARNING LIGHT
ASHTRAY LIGHT
WIPER SWITCH FEED
HEADLIGHT & WIPER SWITCH LIGHT
BRAKE FAILURE WARNING SWITCH
GLOVE BOX LIGHT & SWITCH
COURTESY LIGHT
DOOR SWITCH
CIRCUIT BREAKER FEED WIRES
CIGARETTE LIGHTER
IGN. SWITCH & CIG. LIGHTER LIGHT
TACH. LIGHT
RADIO LIGHT
HEATER LIGHT
HEADLIGHT WARNING BUZZER
CLOCK & LIGHT
HEADLIGHT SWITCH
BRAKE LIGHT
TAIL LIGHT
SIDE LIGHT
REVERSE LIGHT
SIDE LIGHT (WAGON ONLY)
LICENSE PLATE LAMP
DOME LIGHT (SEDAN/WAGON)
CARGO LIGHT (WAGON ONLY)
BODY GROUND (WAGON ONLY)
TRUNK LIGHT
CARGO LIGHT TAILGATE SWITCH (WAGON ONLY)
FUEL LEVEL SENDER
SIDE LIGHT (WAGON ONLY)
DOOR SWITCH
COURTESY LIGHT
REVERSE LIGHT
SIDE LIGHT
TAIL LIGHT
BRAKE LIGHT
HORN
HORN RELAY
BRAKE LIGHT SWITCH
TURN SIGNAL
PARK LAMP
HIGH BEAM
DUAL BEAM
SIDE LIGHT
TEMP. SENDER
DIMMER SWITCH

1968 AMC MARLIN & AMBASSADOR
STARTING SYSTEM

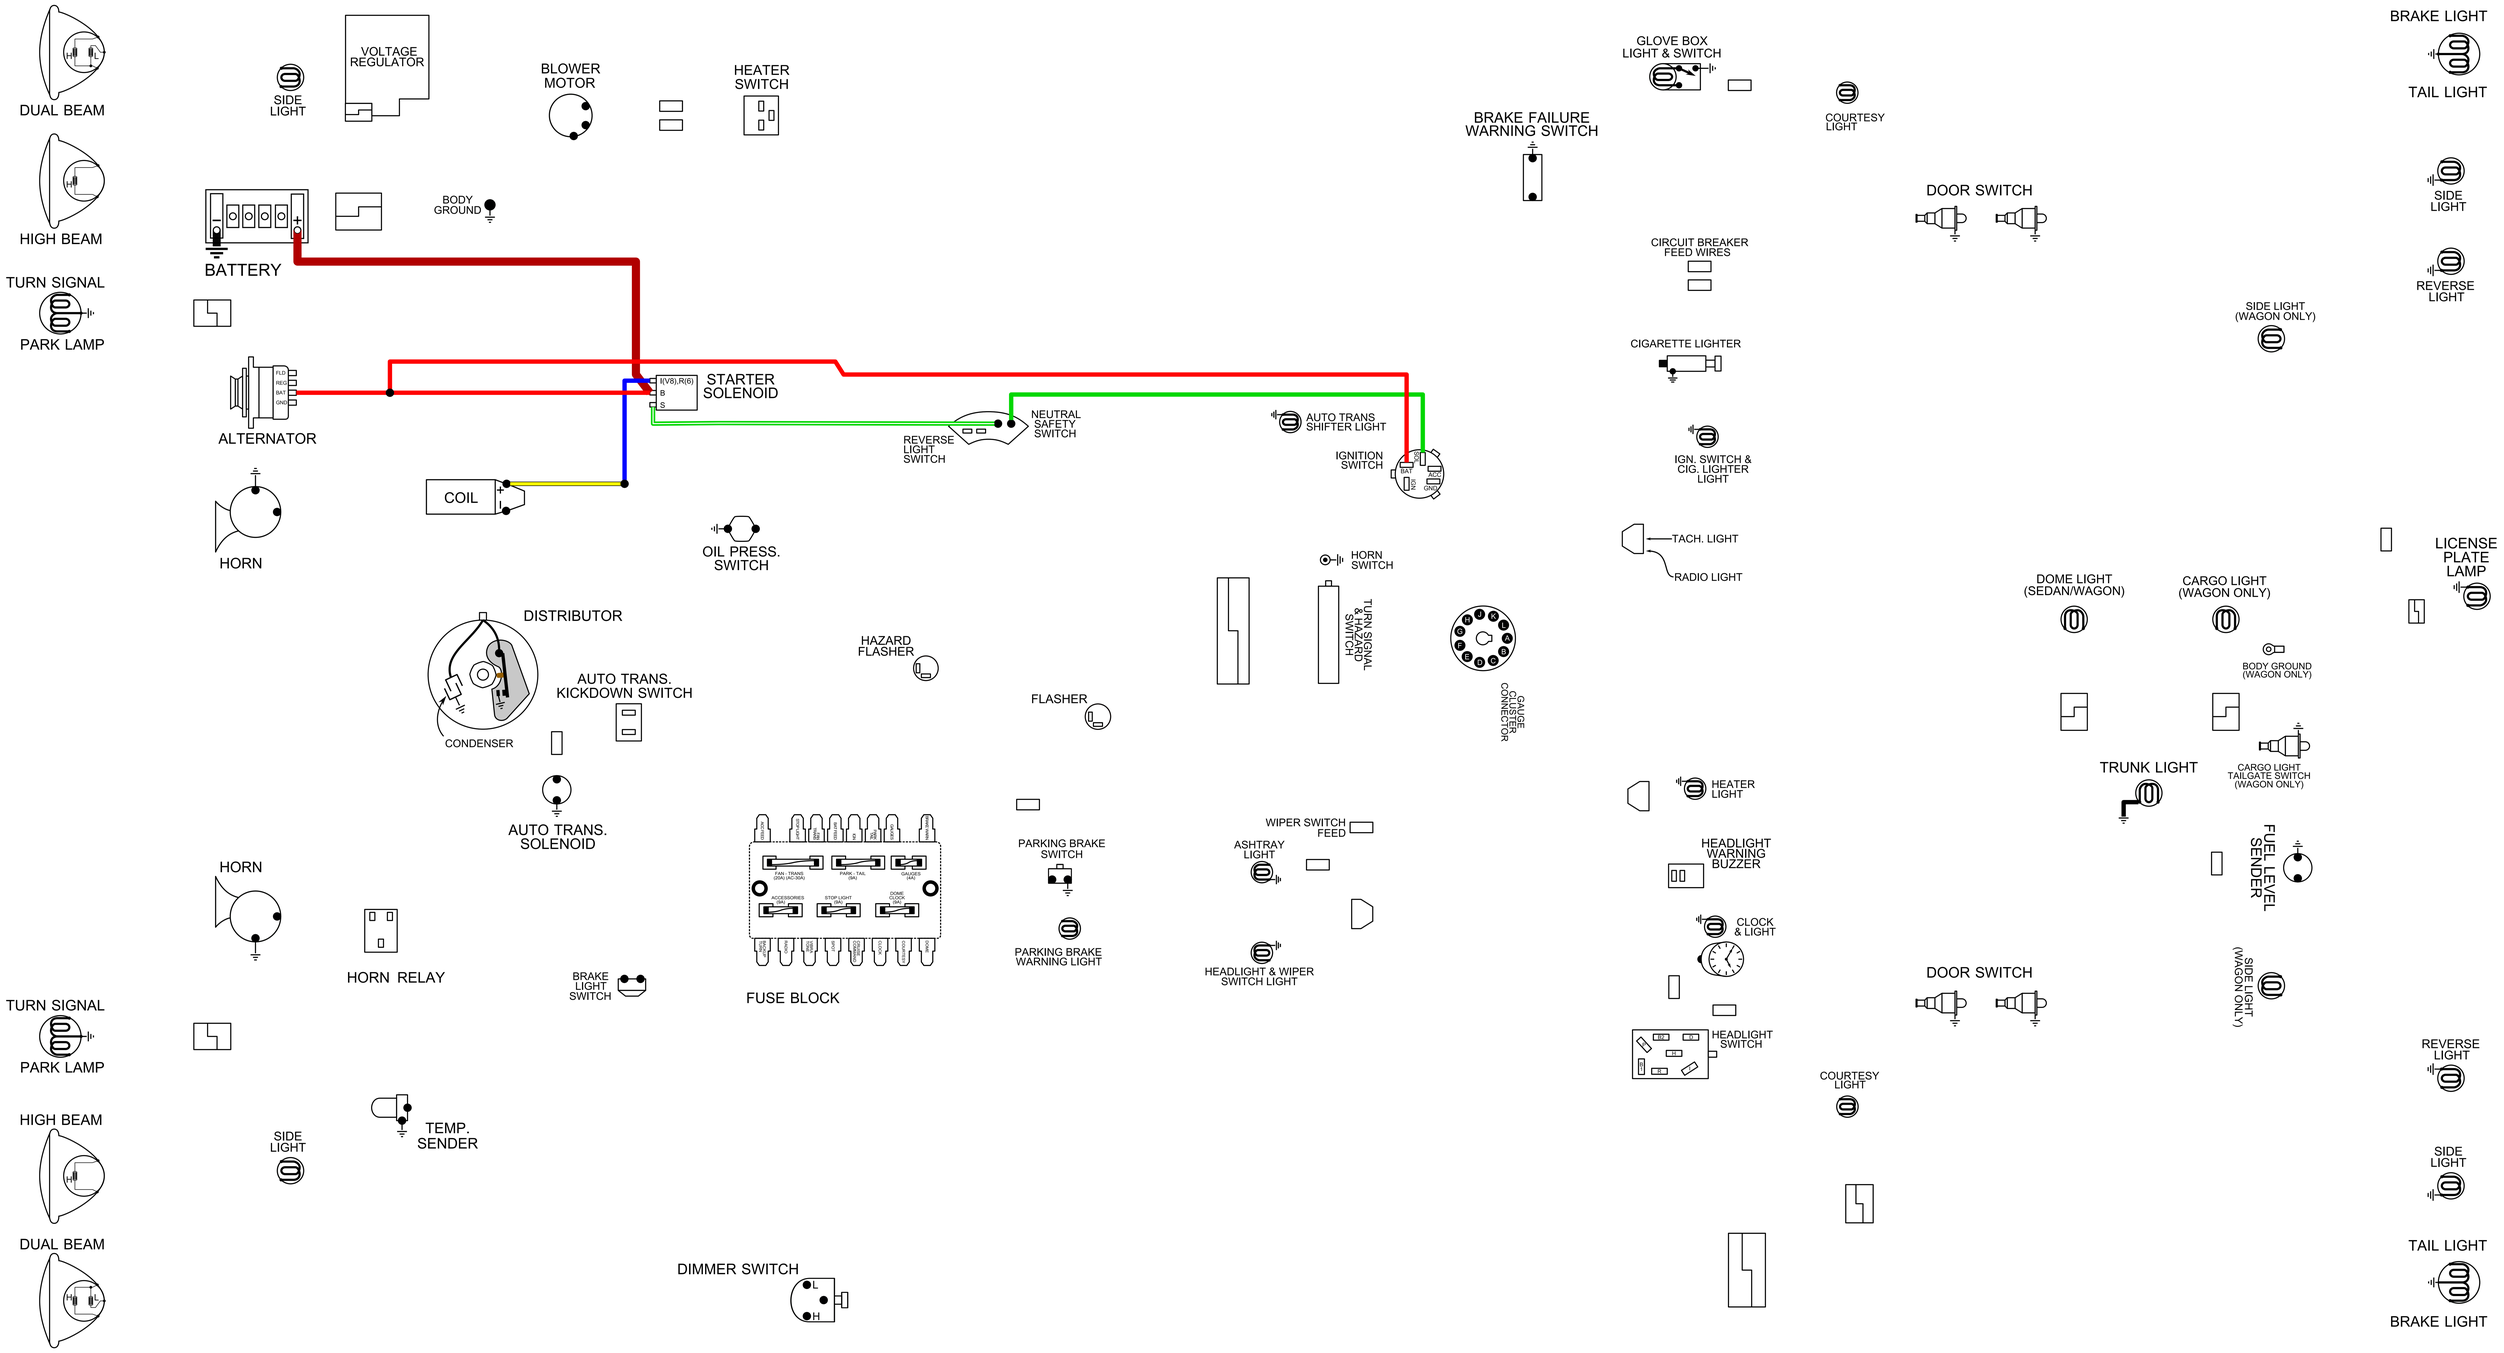


1968 AMC MARLIN & AMBASSADOR
CHARGING SYSTEM

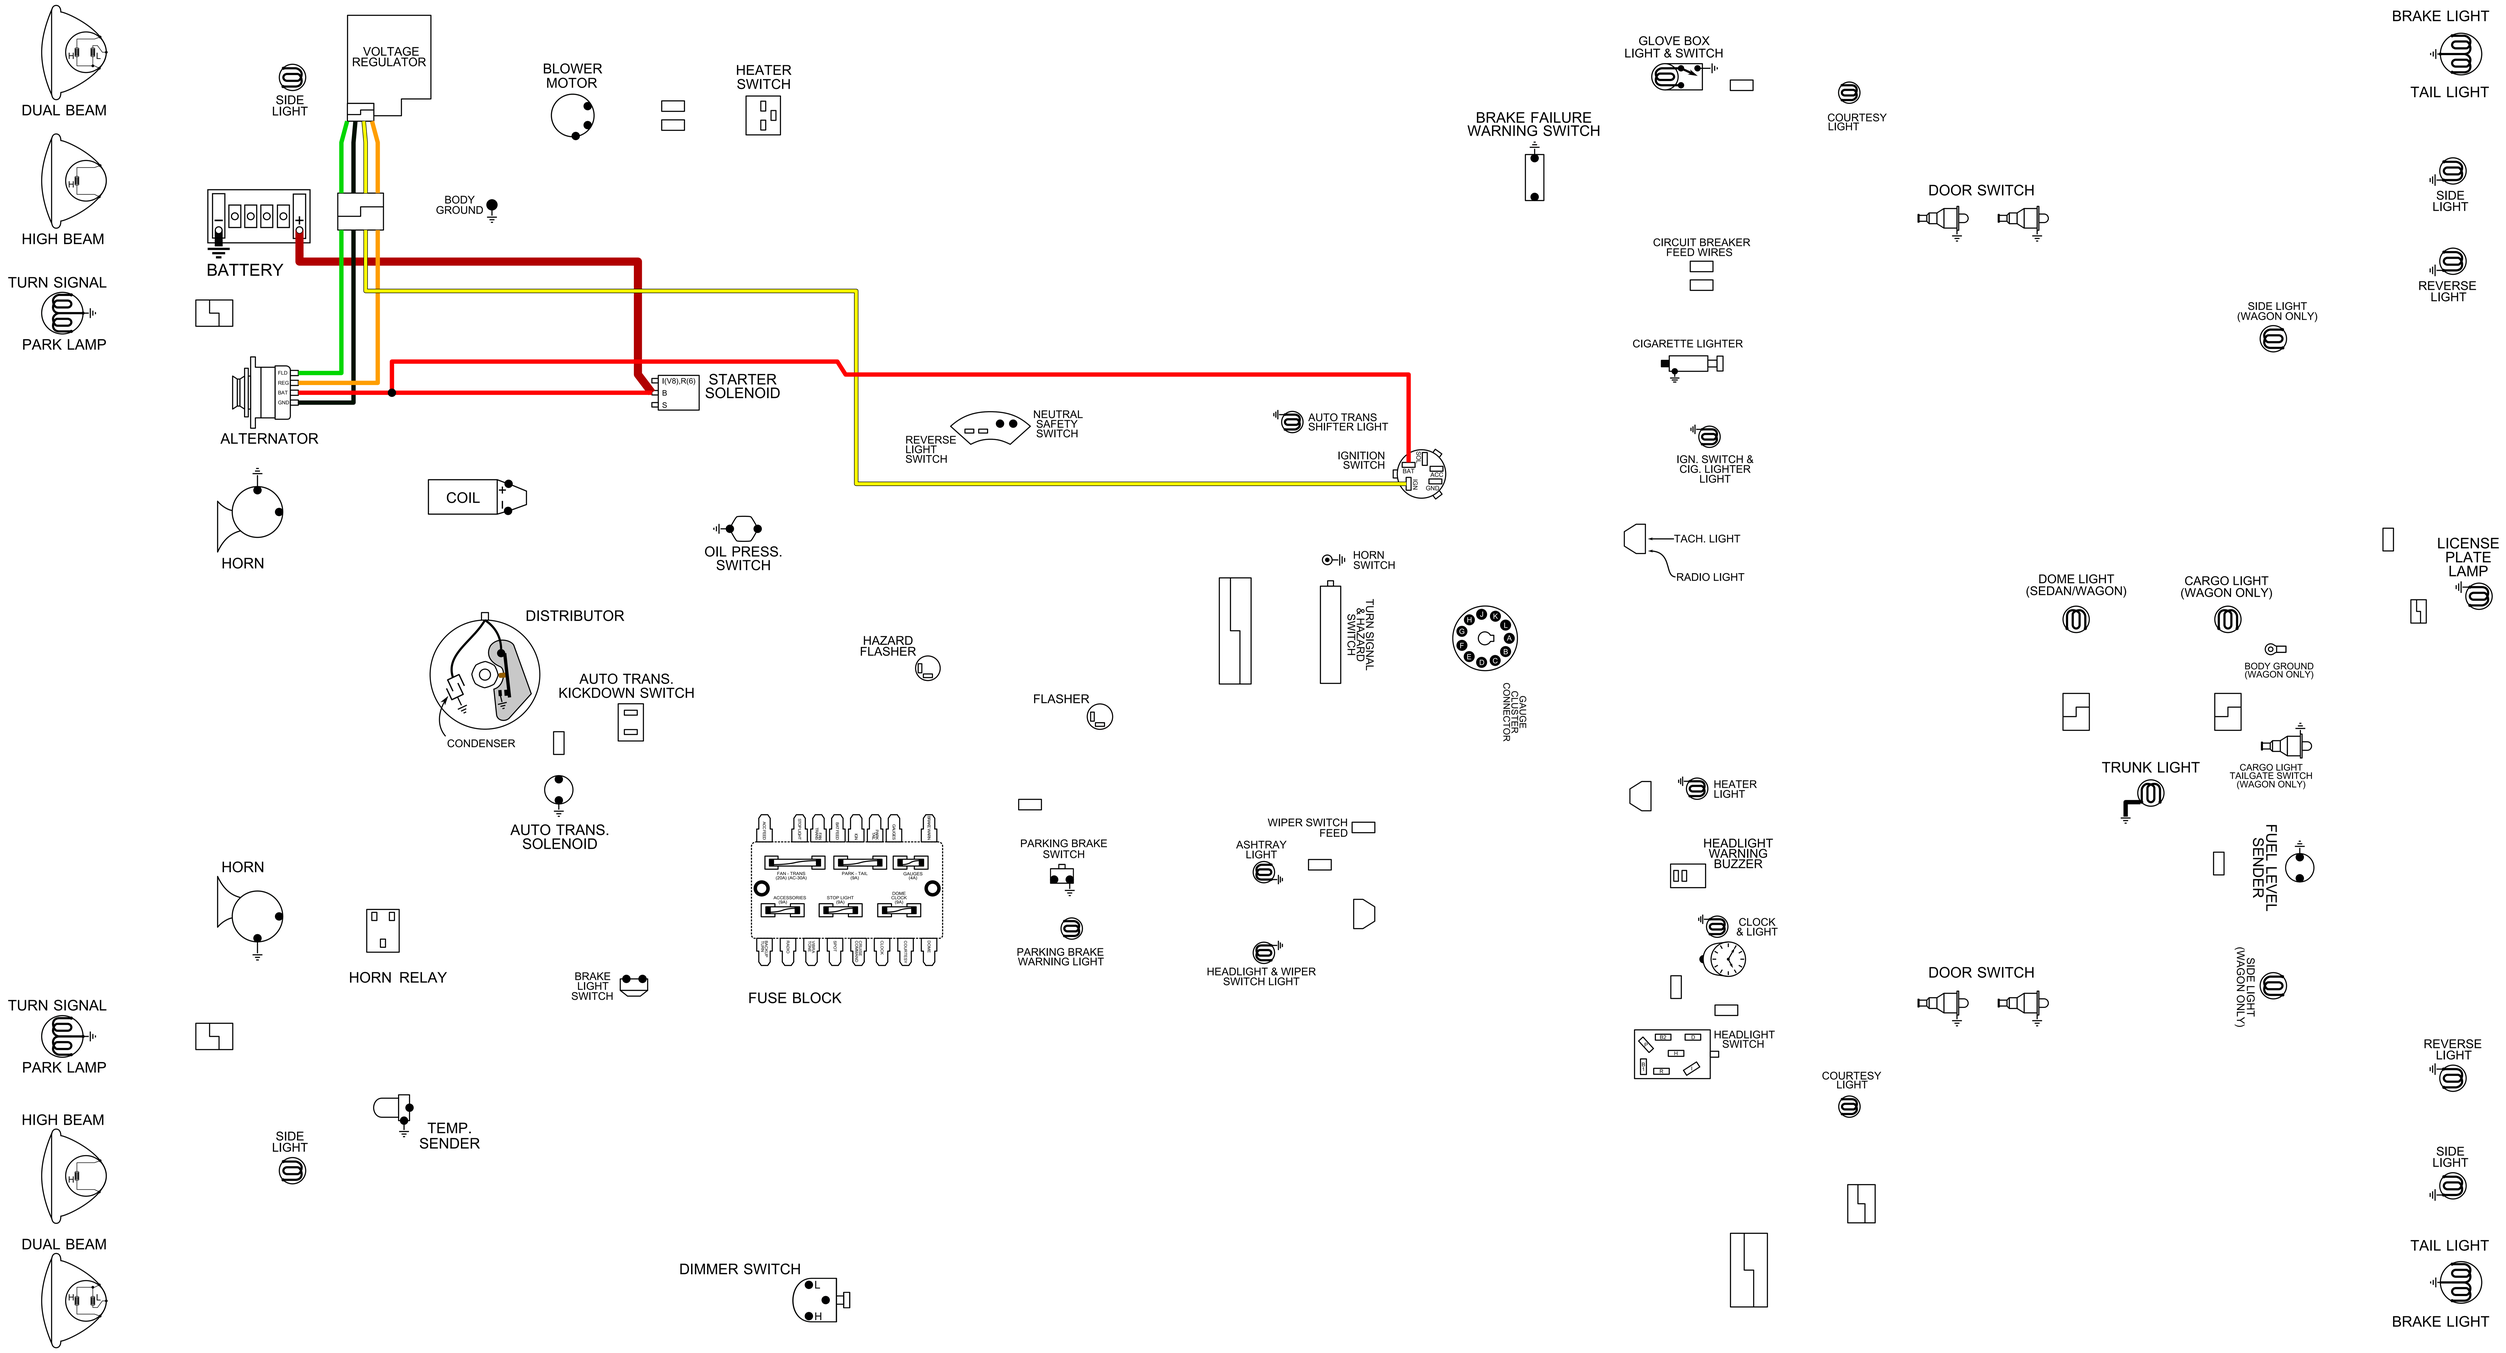


CINCO

1968 AMC MARLIN & AMBASSADOR
HEADLIGHTS

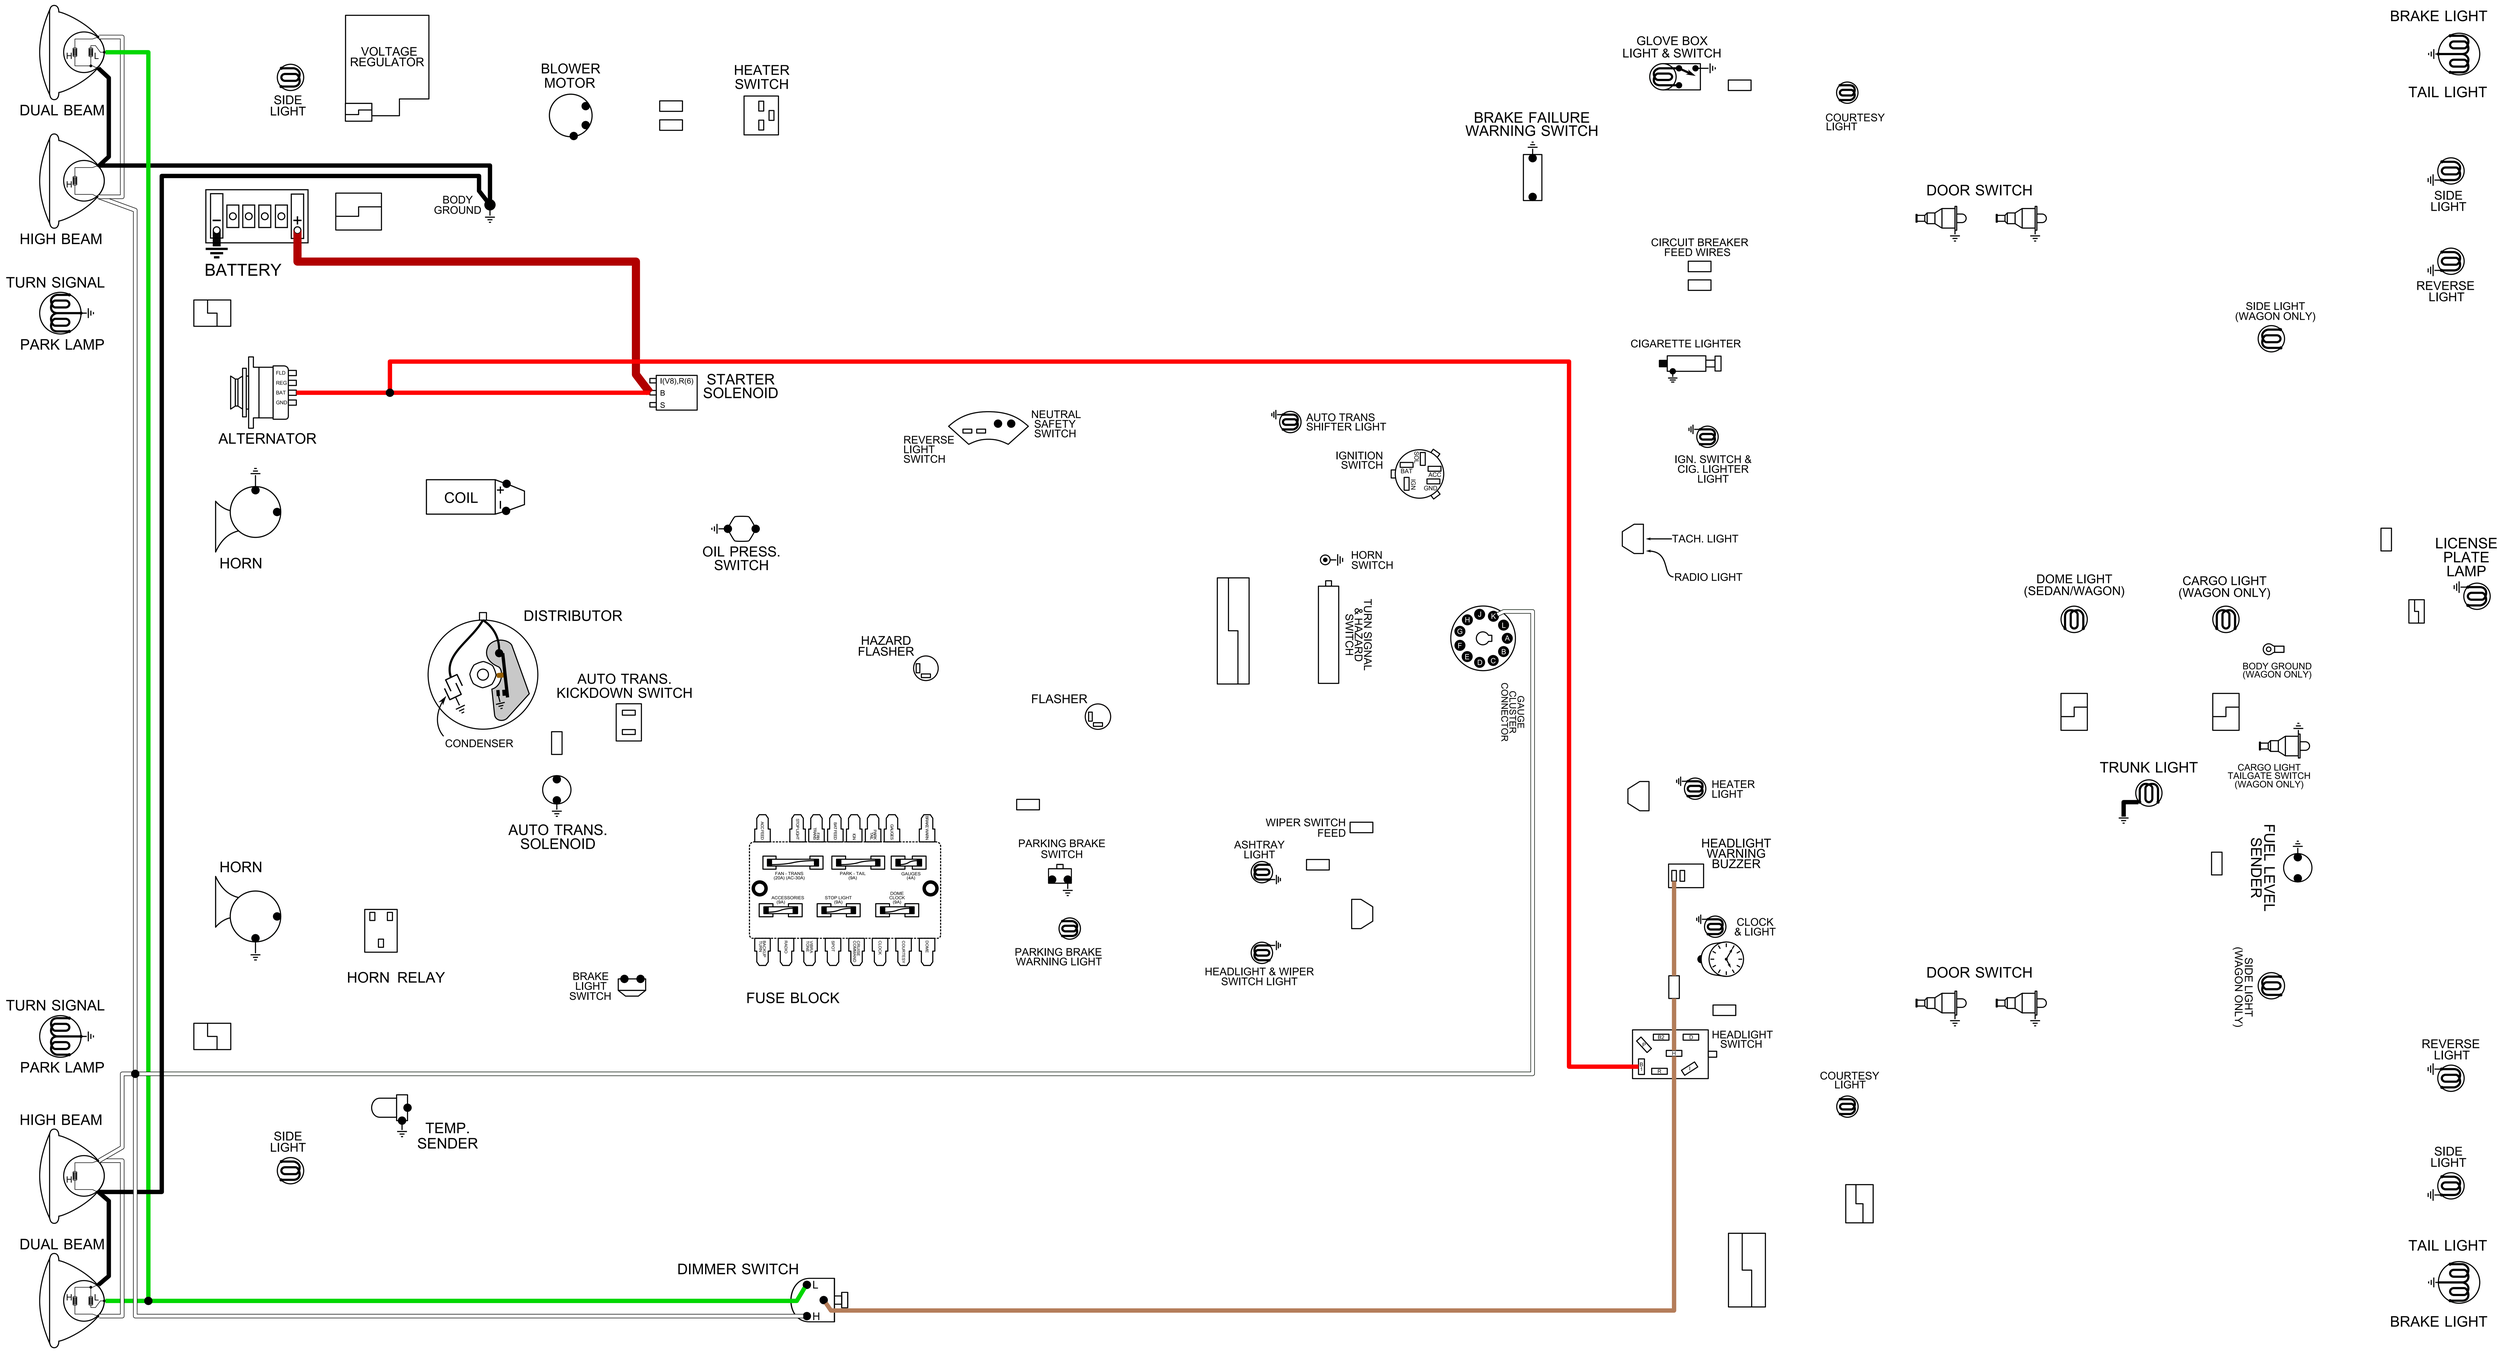

1968 AMC MARLIN & AMBASSADOR
RUNNING LIGHTS

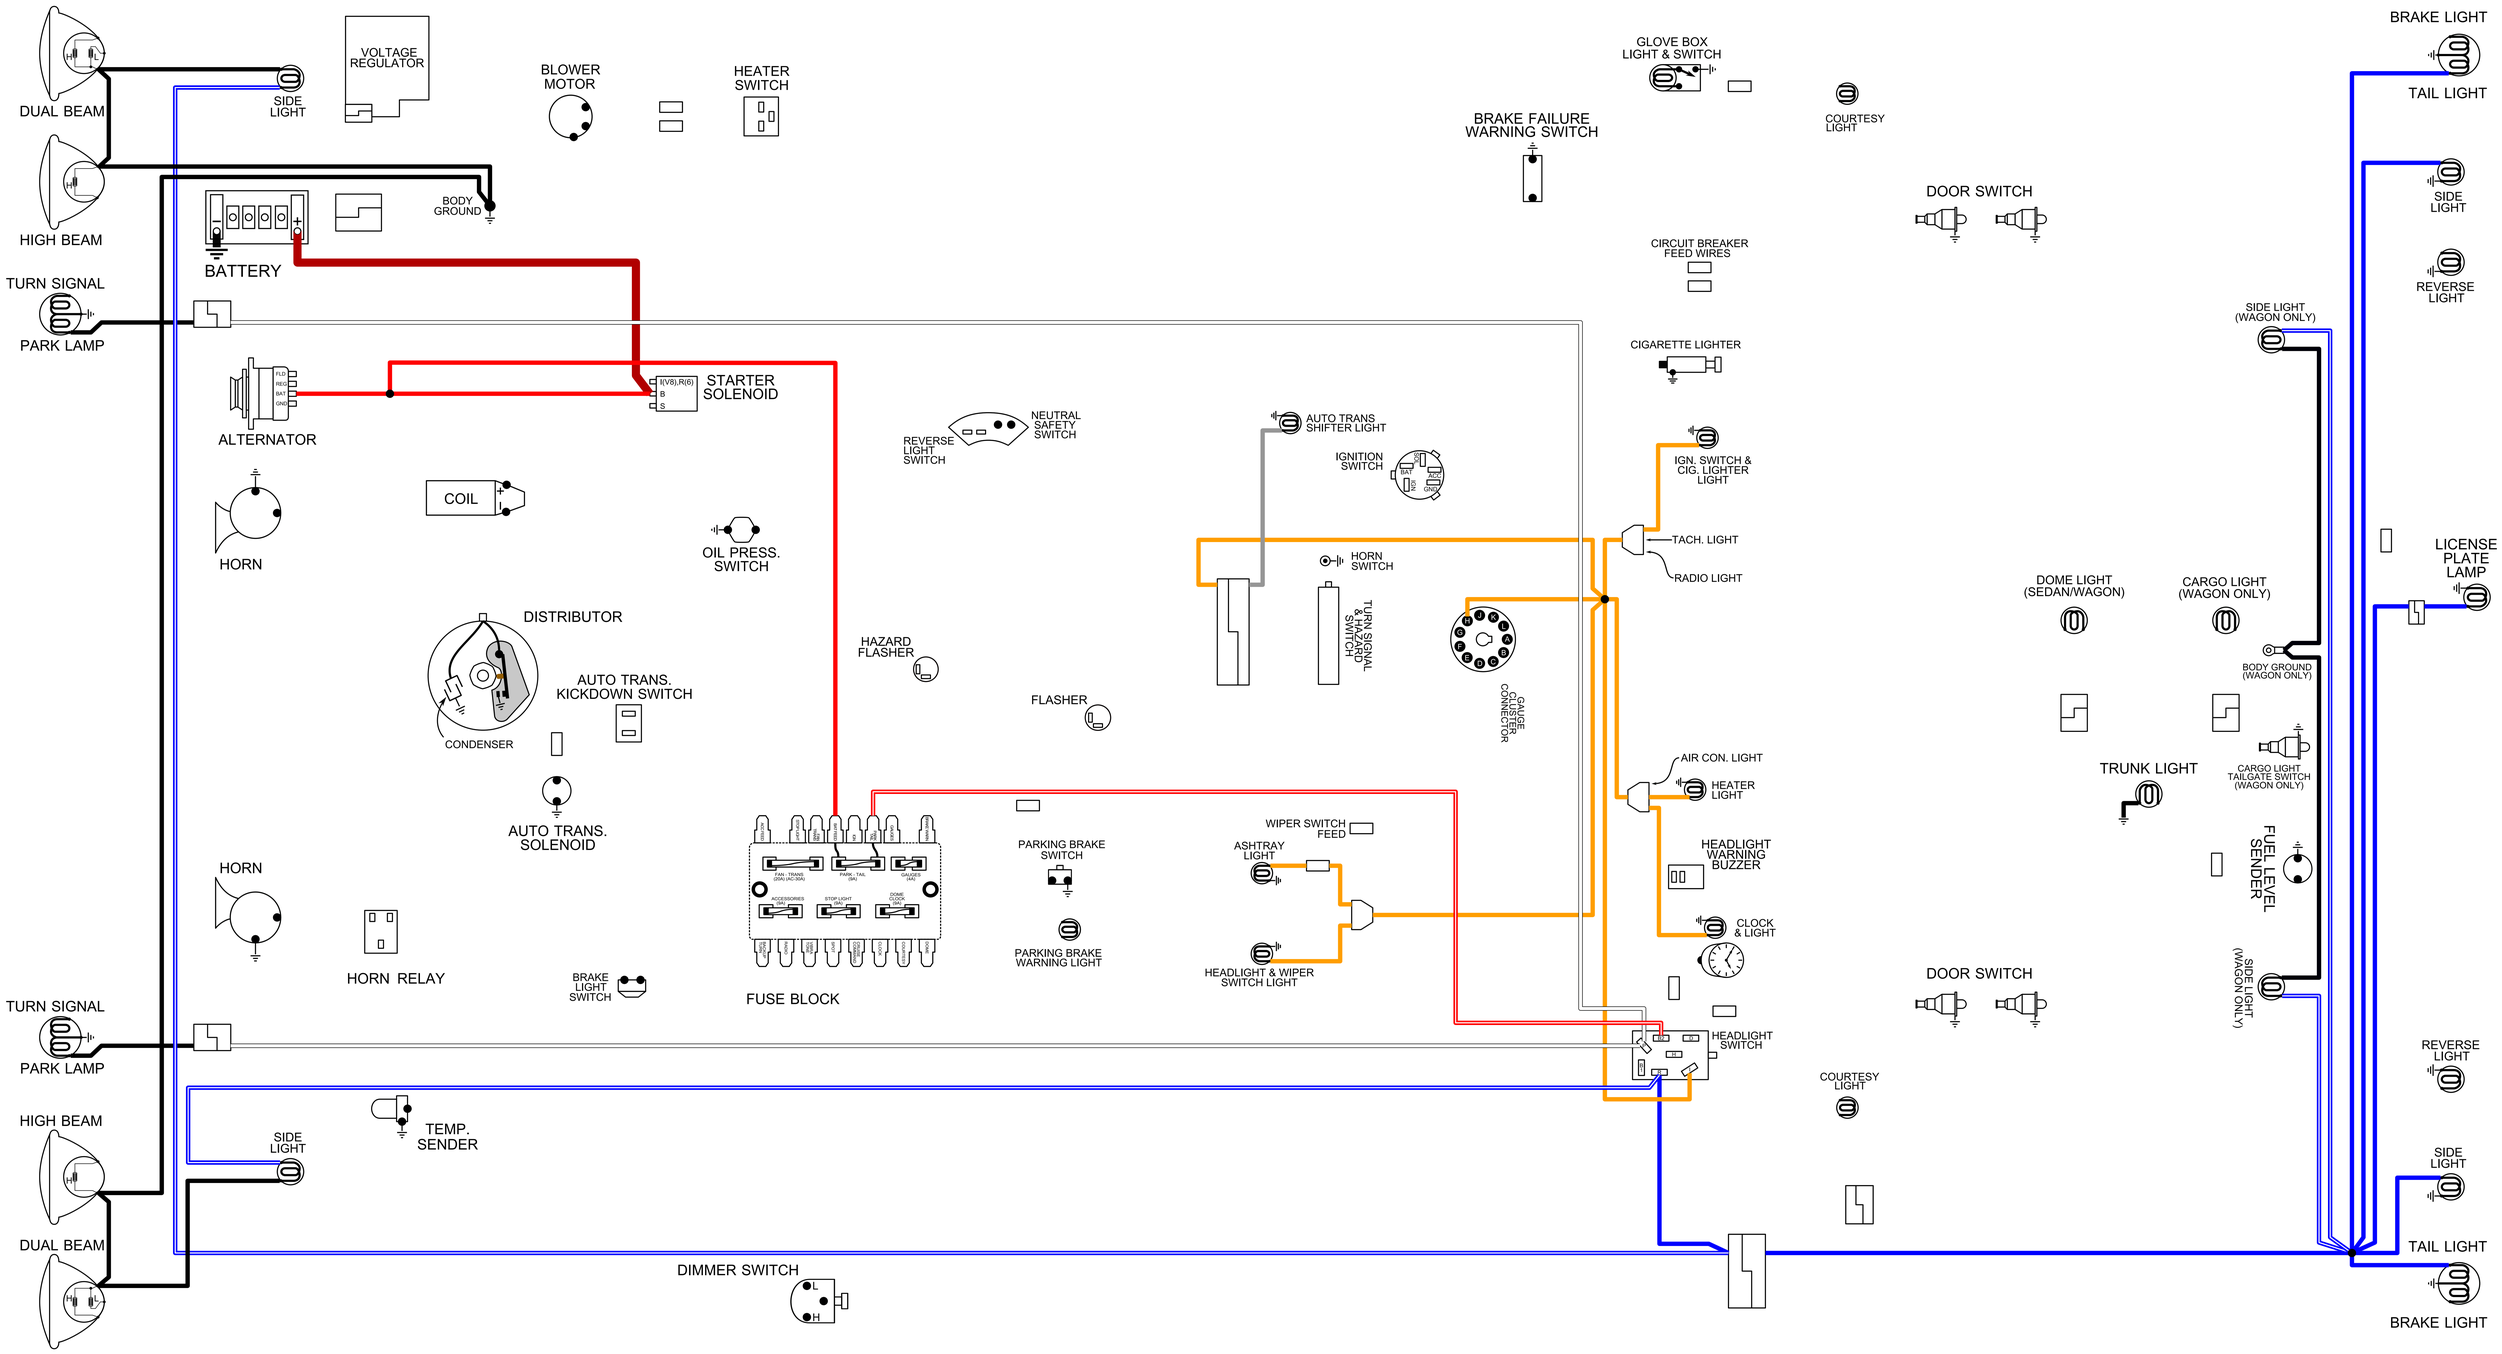


1968 AMC MARLIN & AMBASSADOR
BRAKE LIGHTS

DUAL BEAM
HIGH BEAM
TURN SIGNAL
PARK LAMP
SIDE LIGHT
VOLTAGE REGULATOR
BLOWER MOTOR
HEATER SWITCH
BODY GROUND
BATTERY
ALTERNATOR
STARTER SOLENOID
HORN
COIL
OIL PRESS. SWITCH
DISTRIBUTOR
CONDENSER
AUTO TRANS. KICKDOWN SWITCH
AUTO TRANS. SOLENOID
HAZARD FLASHER
FLASHER
BRAKE LIGHT SWITCH
FUSE BLOCK
PARKING BRAKE SWITCH
PARKING BRAKE WARNING LIGHT
REVERSE LIGHT SWITCH
NEUTRAL SAFETY SWITCH
AUTO TRANS SHIFTER LIGHT
IGNITION SWITCH
HORN SWITCH
TURN SIGNAL & HAZARD SWITCH
GAUGE CLUSTER CONNECTOR
WIPER SWITCH FEED
ASHTRAY LIGHT
HEADLIGHT & WIPER SWITCH LIGHT
BRAKE FAILURE WARNING SWITCH
GLOVE BOX LIGHT & SWITCH
COURTESY LIGHT
DOOR SWITCH
CIRCUIT BREAKER FEED WIRES
CIGARETTE LIGHTER
IGN. SWITCH & CIG. LIGHTER LIGHT
TACH. LIGHT
RADIO LIGHT
HEATER LIGHT
HEADLIGHT WARNING BUZZER
CLOCK & LIGHT
HEADLIGHT SWITCH
COURTESY LIGHT
DOOR SWITCH
SIDE LIGHT (WAGON ONLY)
DOME LIGHT (SEDAN/WAGON)
CARGO LIGHT (WAGON ONLY)
BODY GROUND (WAGON ONLY)
TRUNK LIGHT
CARGO LIGHT TAILGATE SWITCH (WAGON ONLY)
FUEL LEVEL SENDER
SIDE LIGHT (WAGON ONLY)
BRAKE LIGHT
TAIL LIGHT
SIDE LIGHT
REVERSE LIGHT
LICENSE PLATE LAMP
SIDE LIGHT
REVERSE LIGHT
SIDE LIGHT
TAIL LIGHT
BRAKE LIGHT
HORN
HORN RELAY
TURN SIGNAL
PARK LAMP
HIGH BEAM
DUAL BEAM
SIDE LIGHT
TEMP. SENDER
DIMMER SWITCH


CINCO

1968 AMC MARLIN & AMBASSADOR
TURN SIGNALS

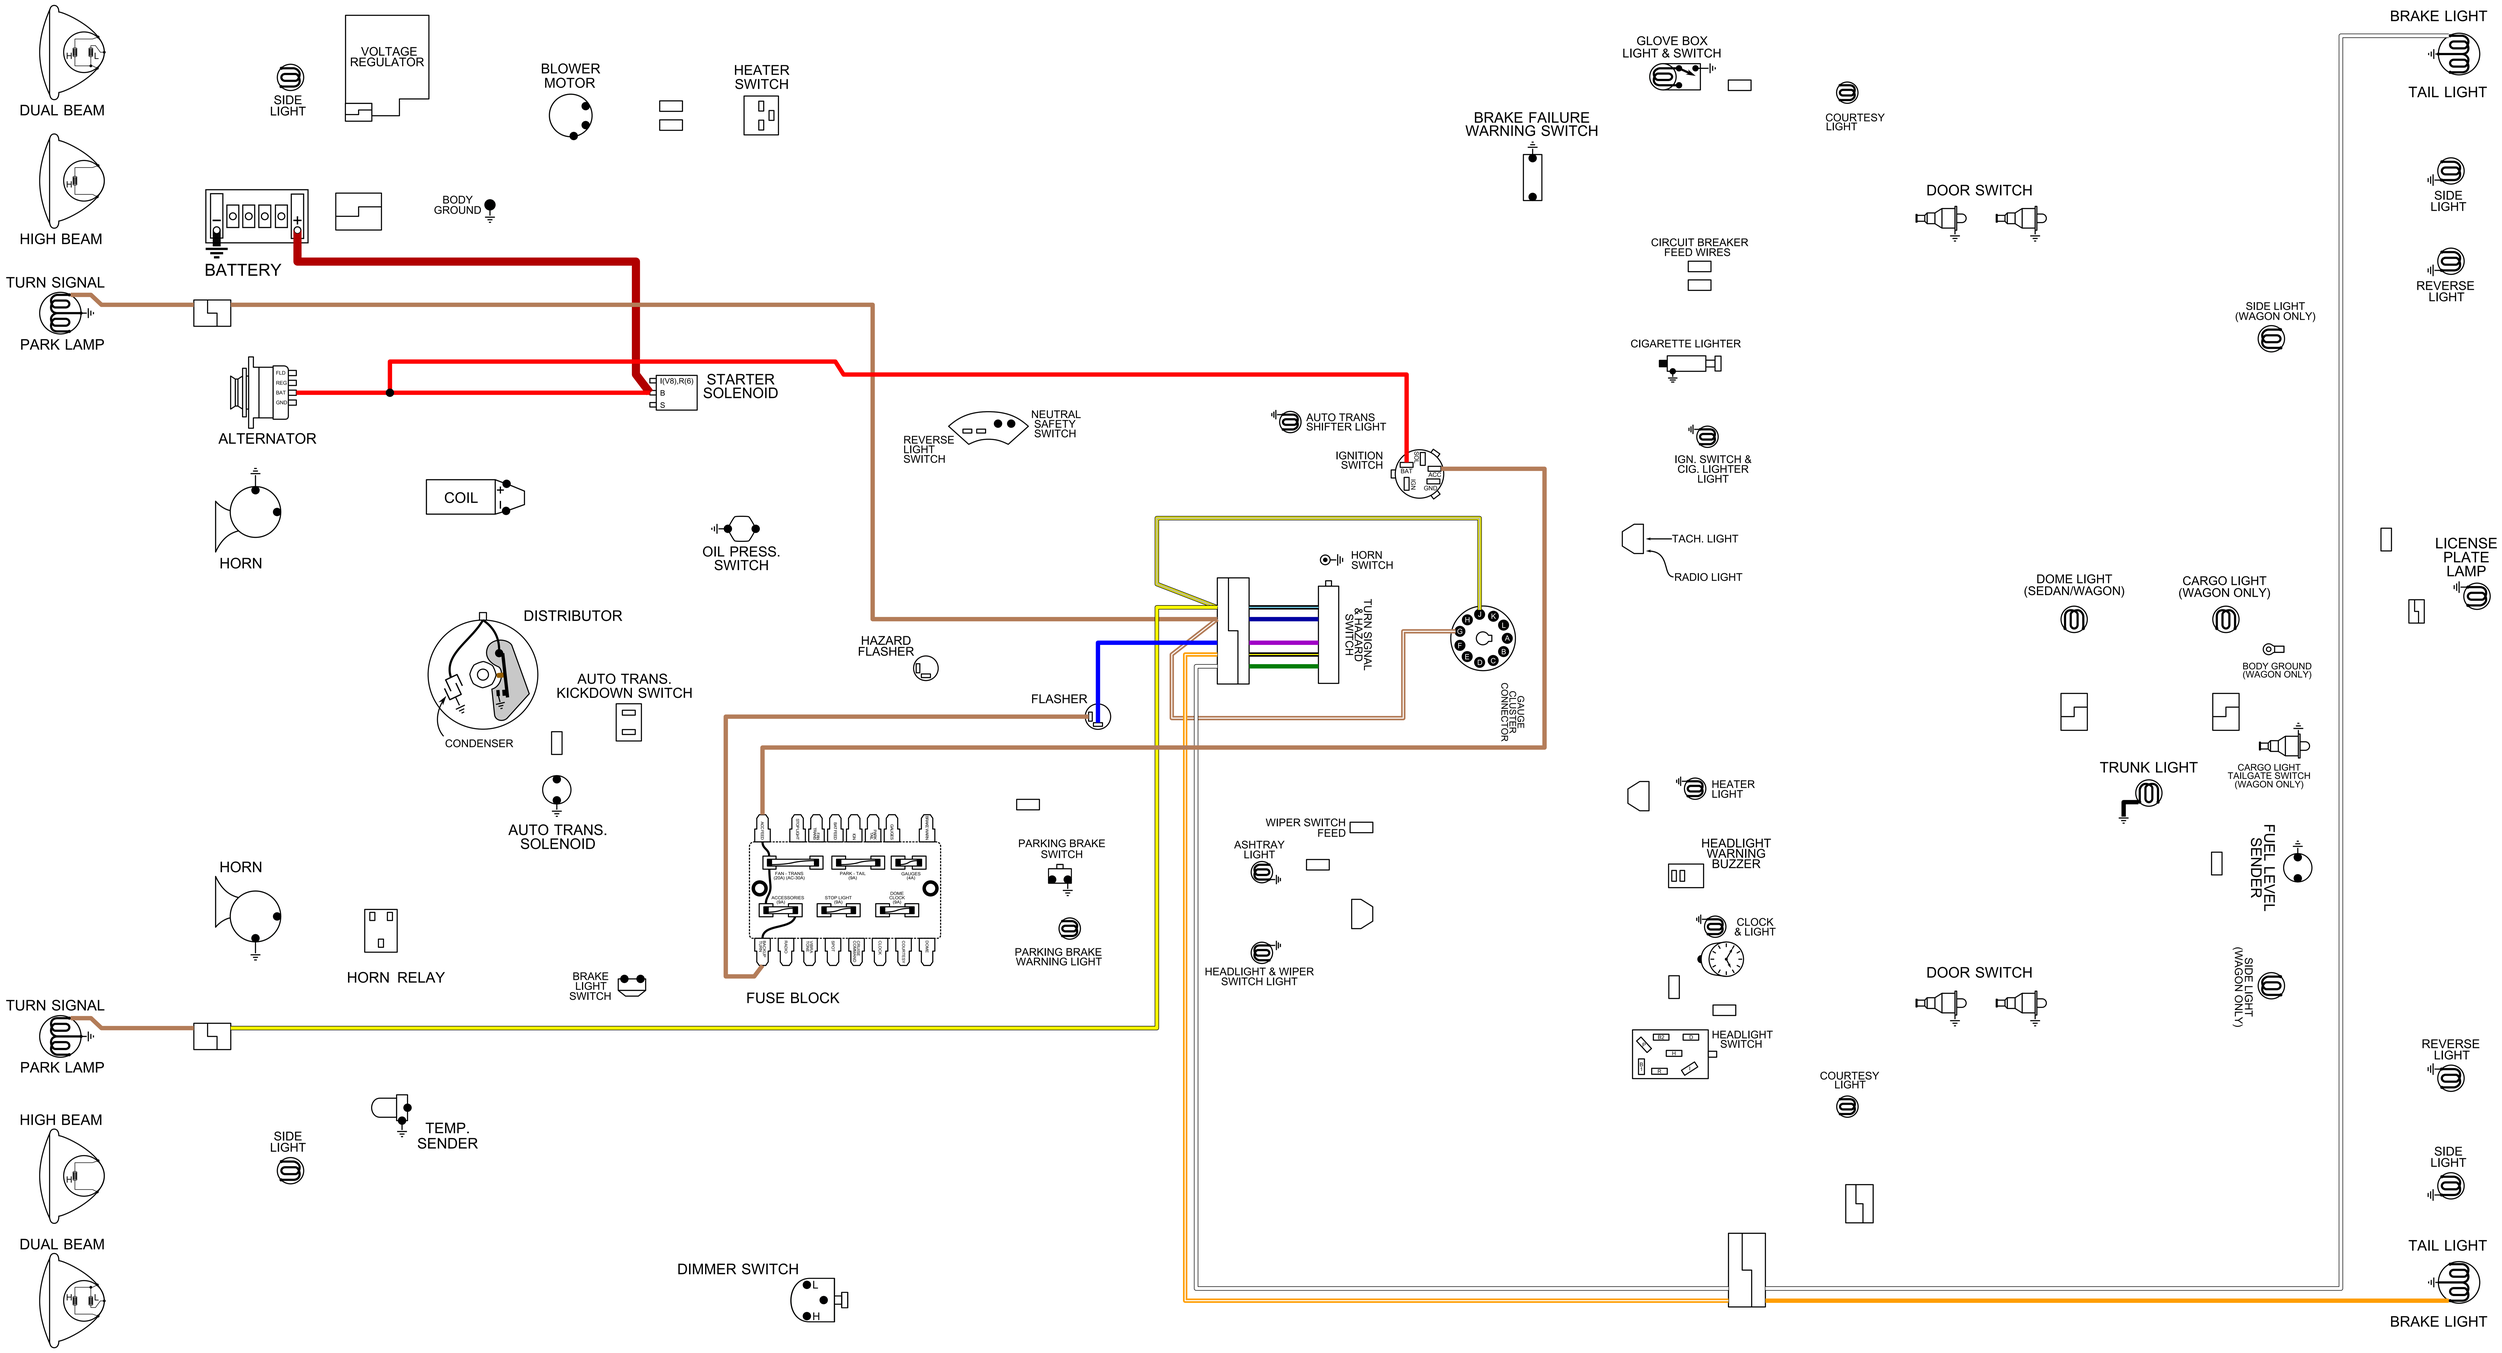


CINCO

1968 AMC MARLIN & AMBASSADOR
HEATER

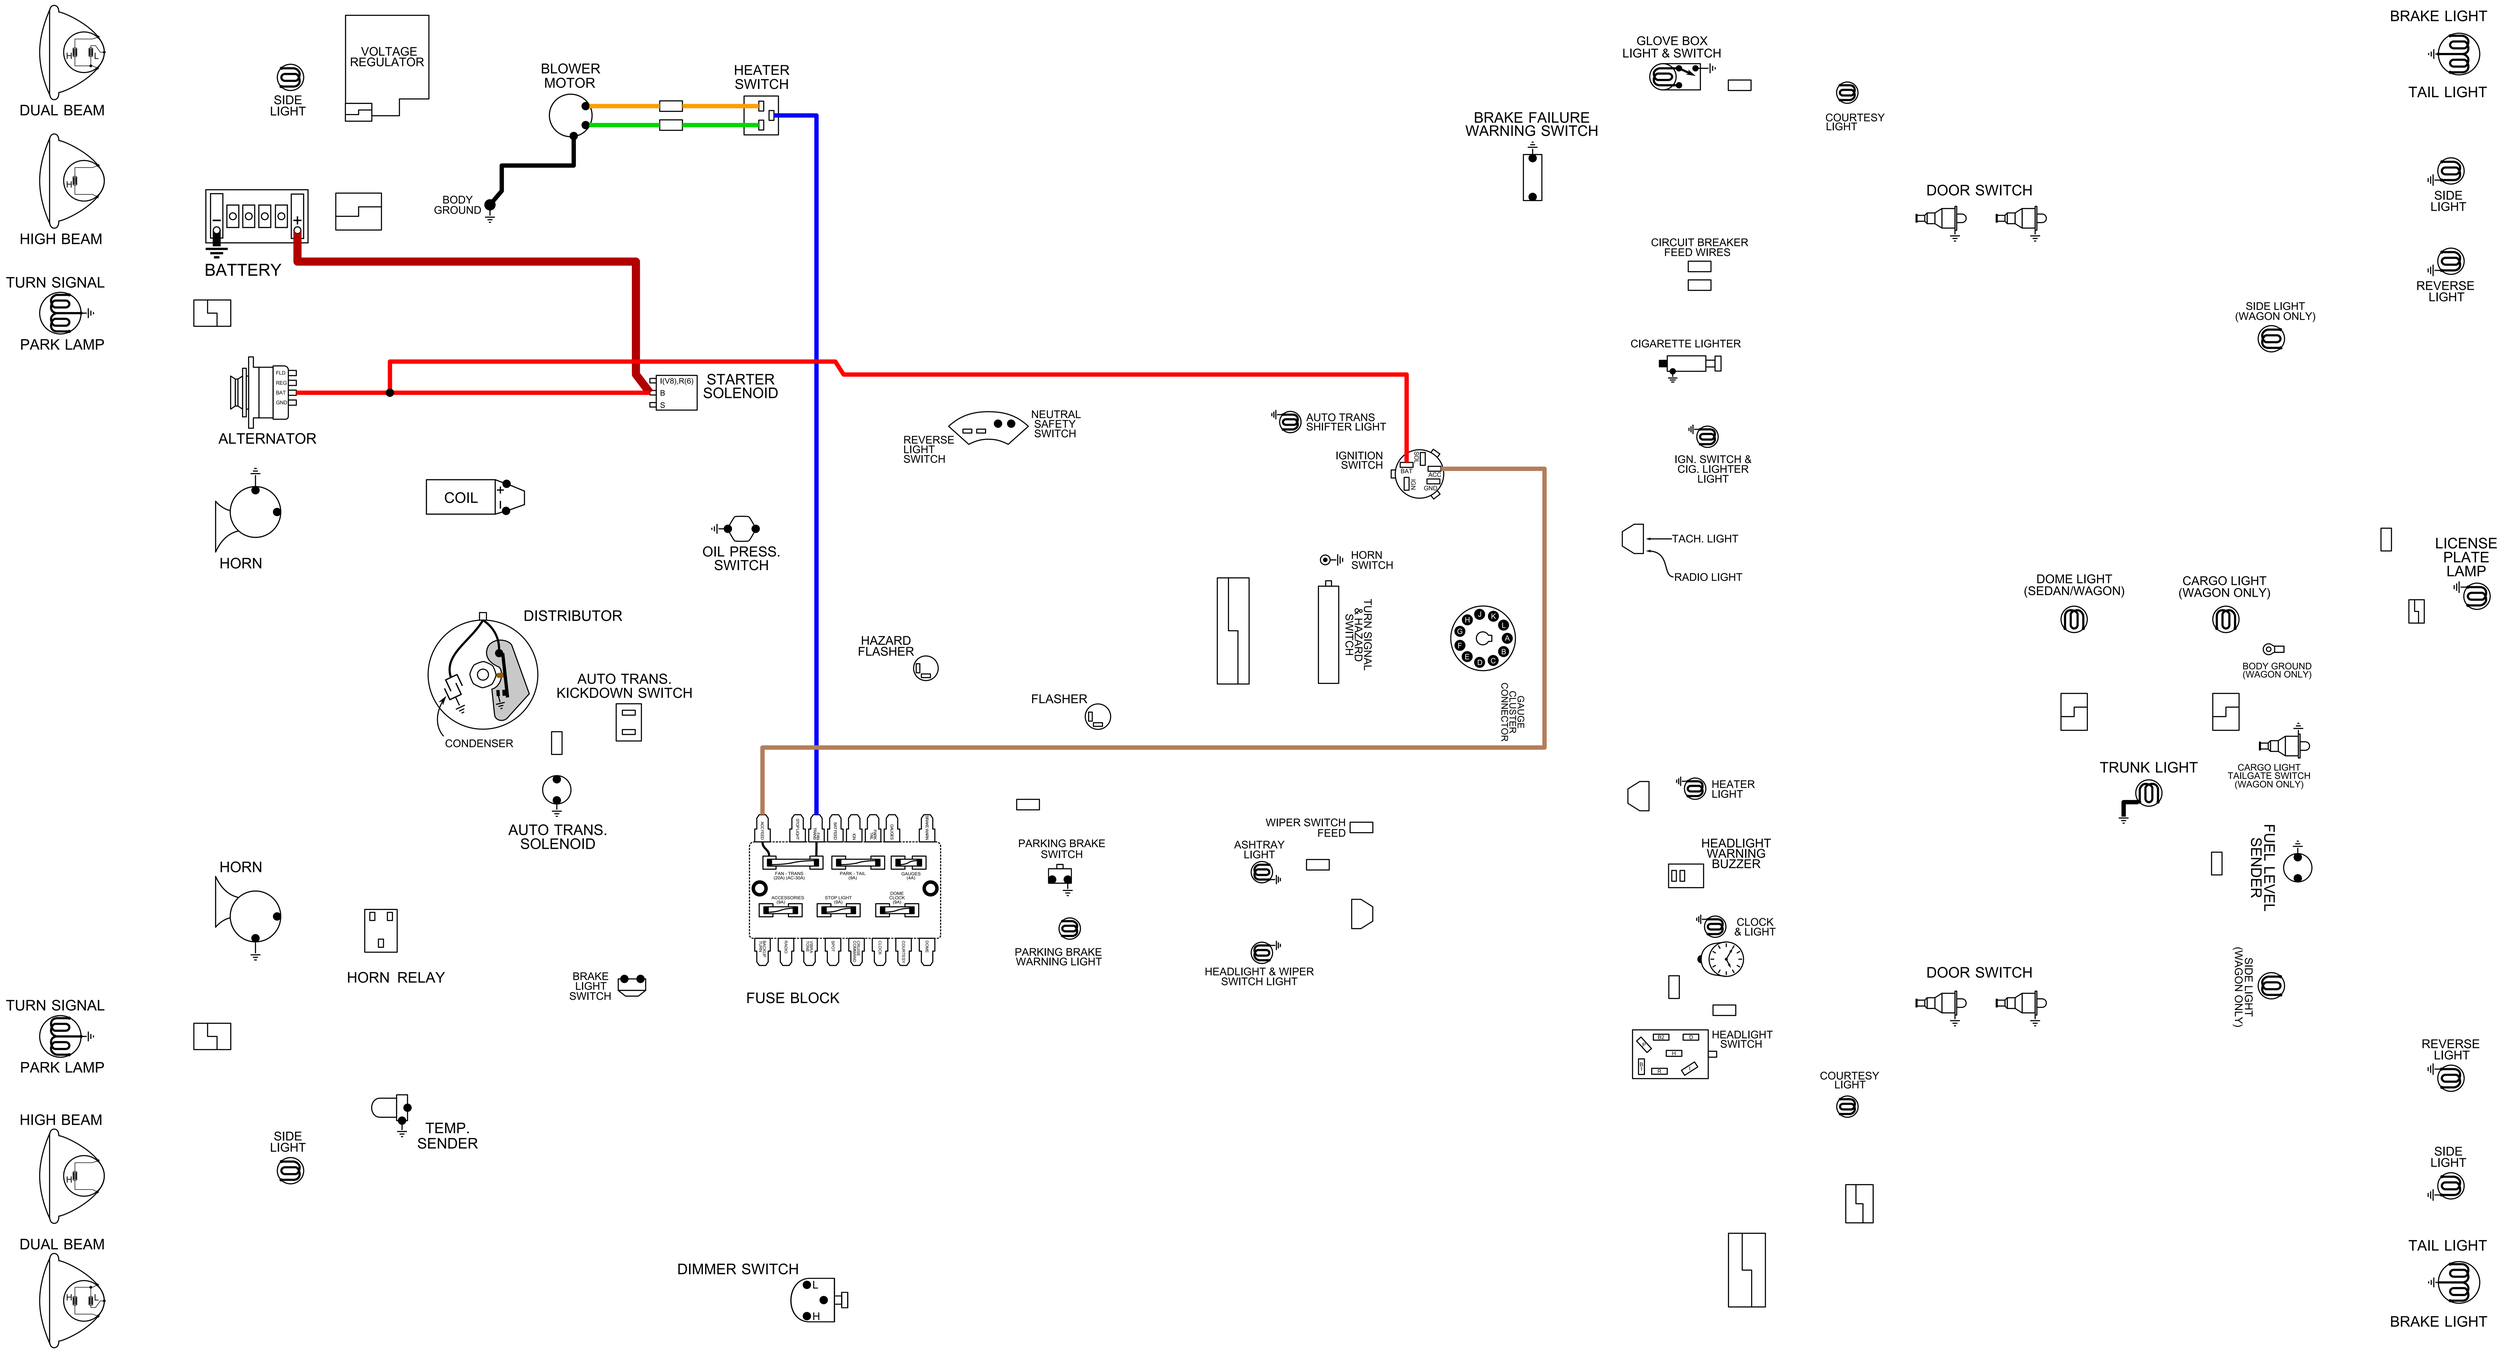


CINCO

1968 AMC MARLIN & AMBASSADOR
HORN

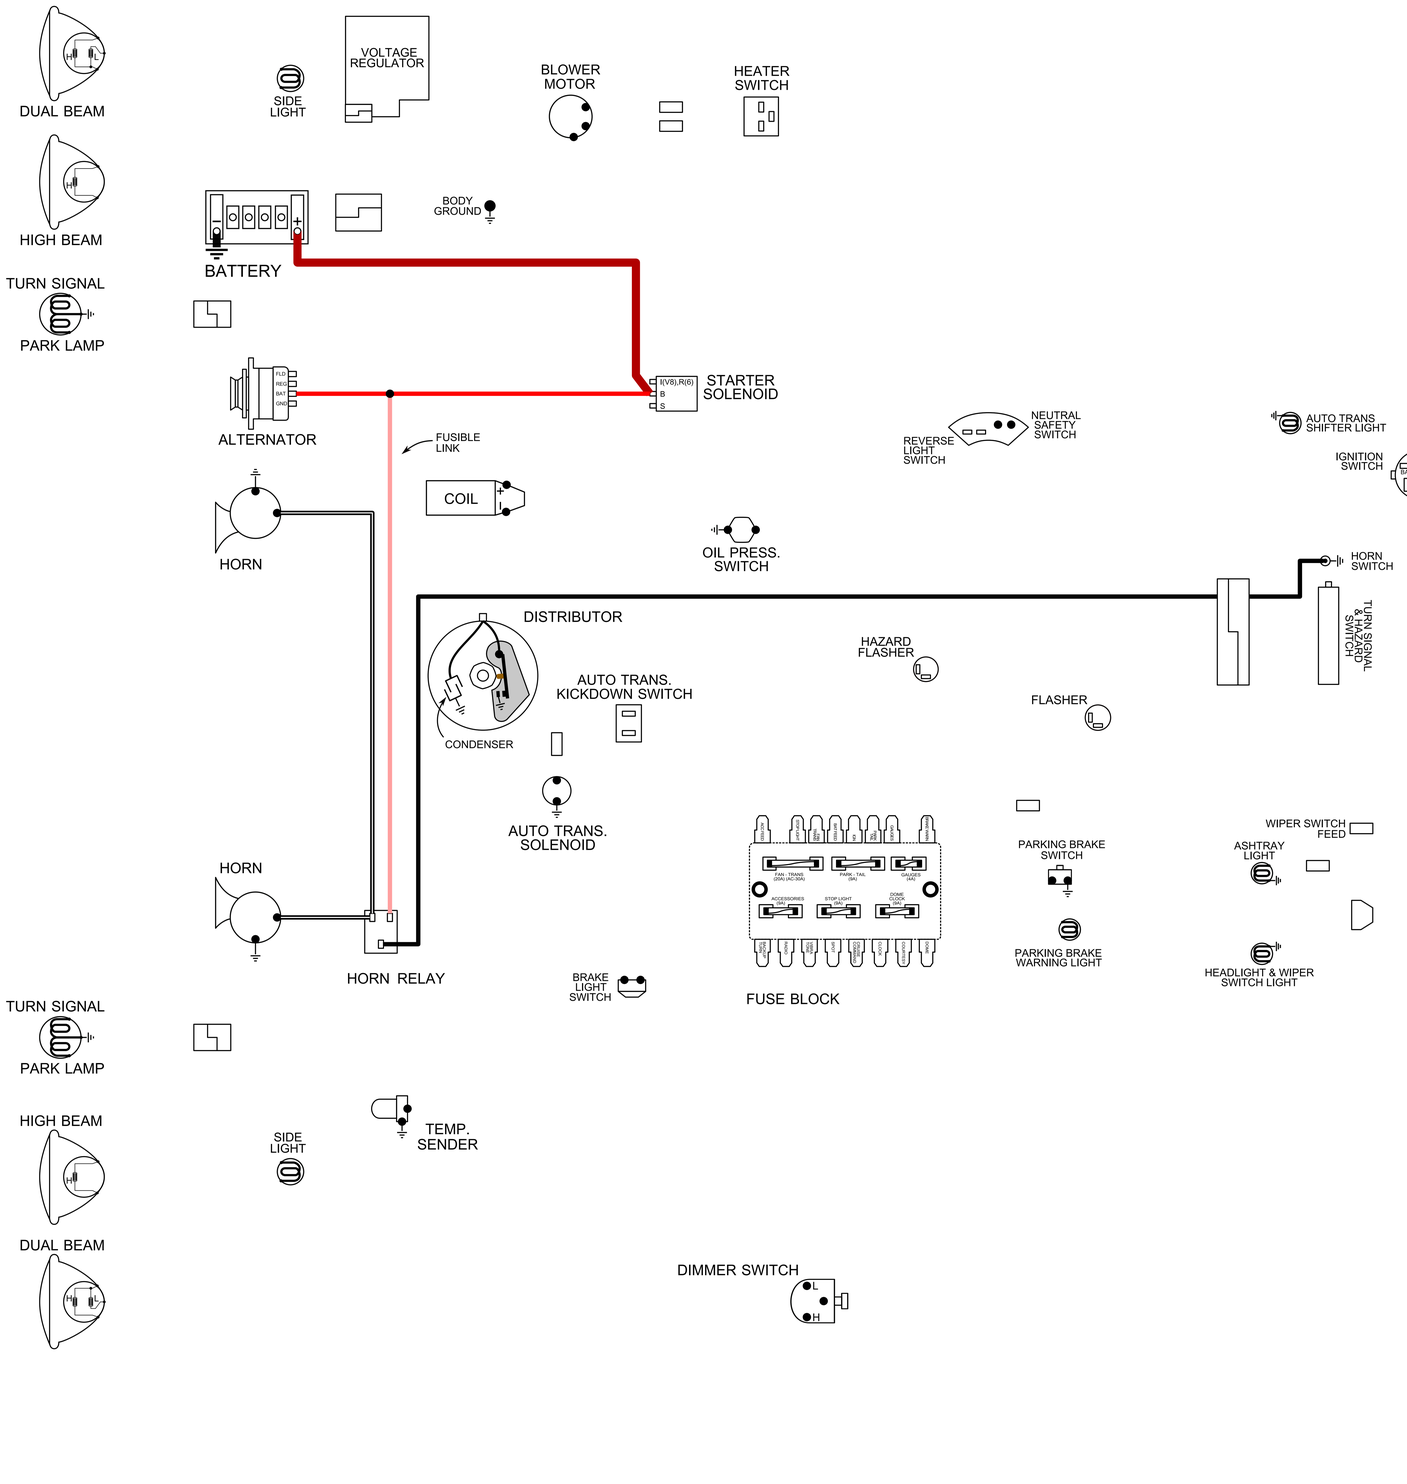

CINCO


1968 AMC MARLIN & AMBASSADOR
TRANSMISSION

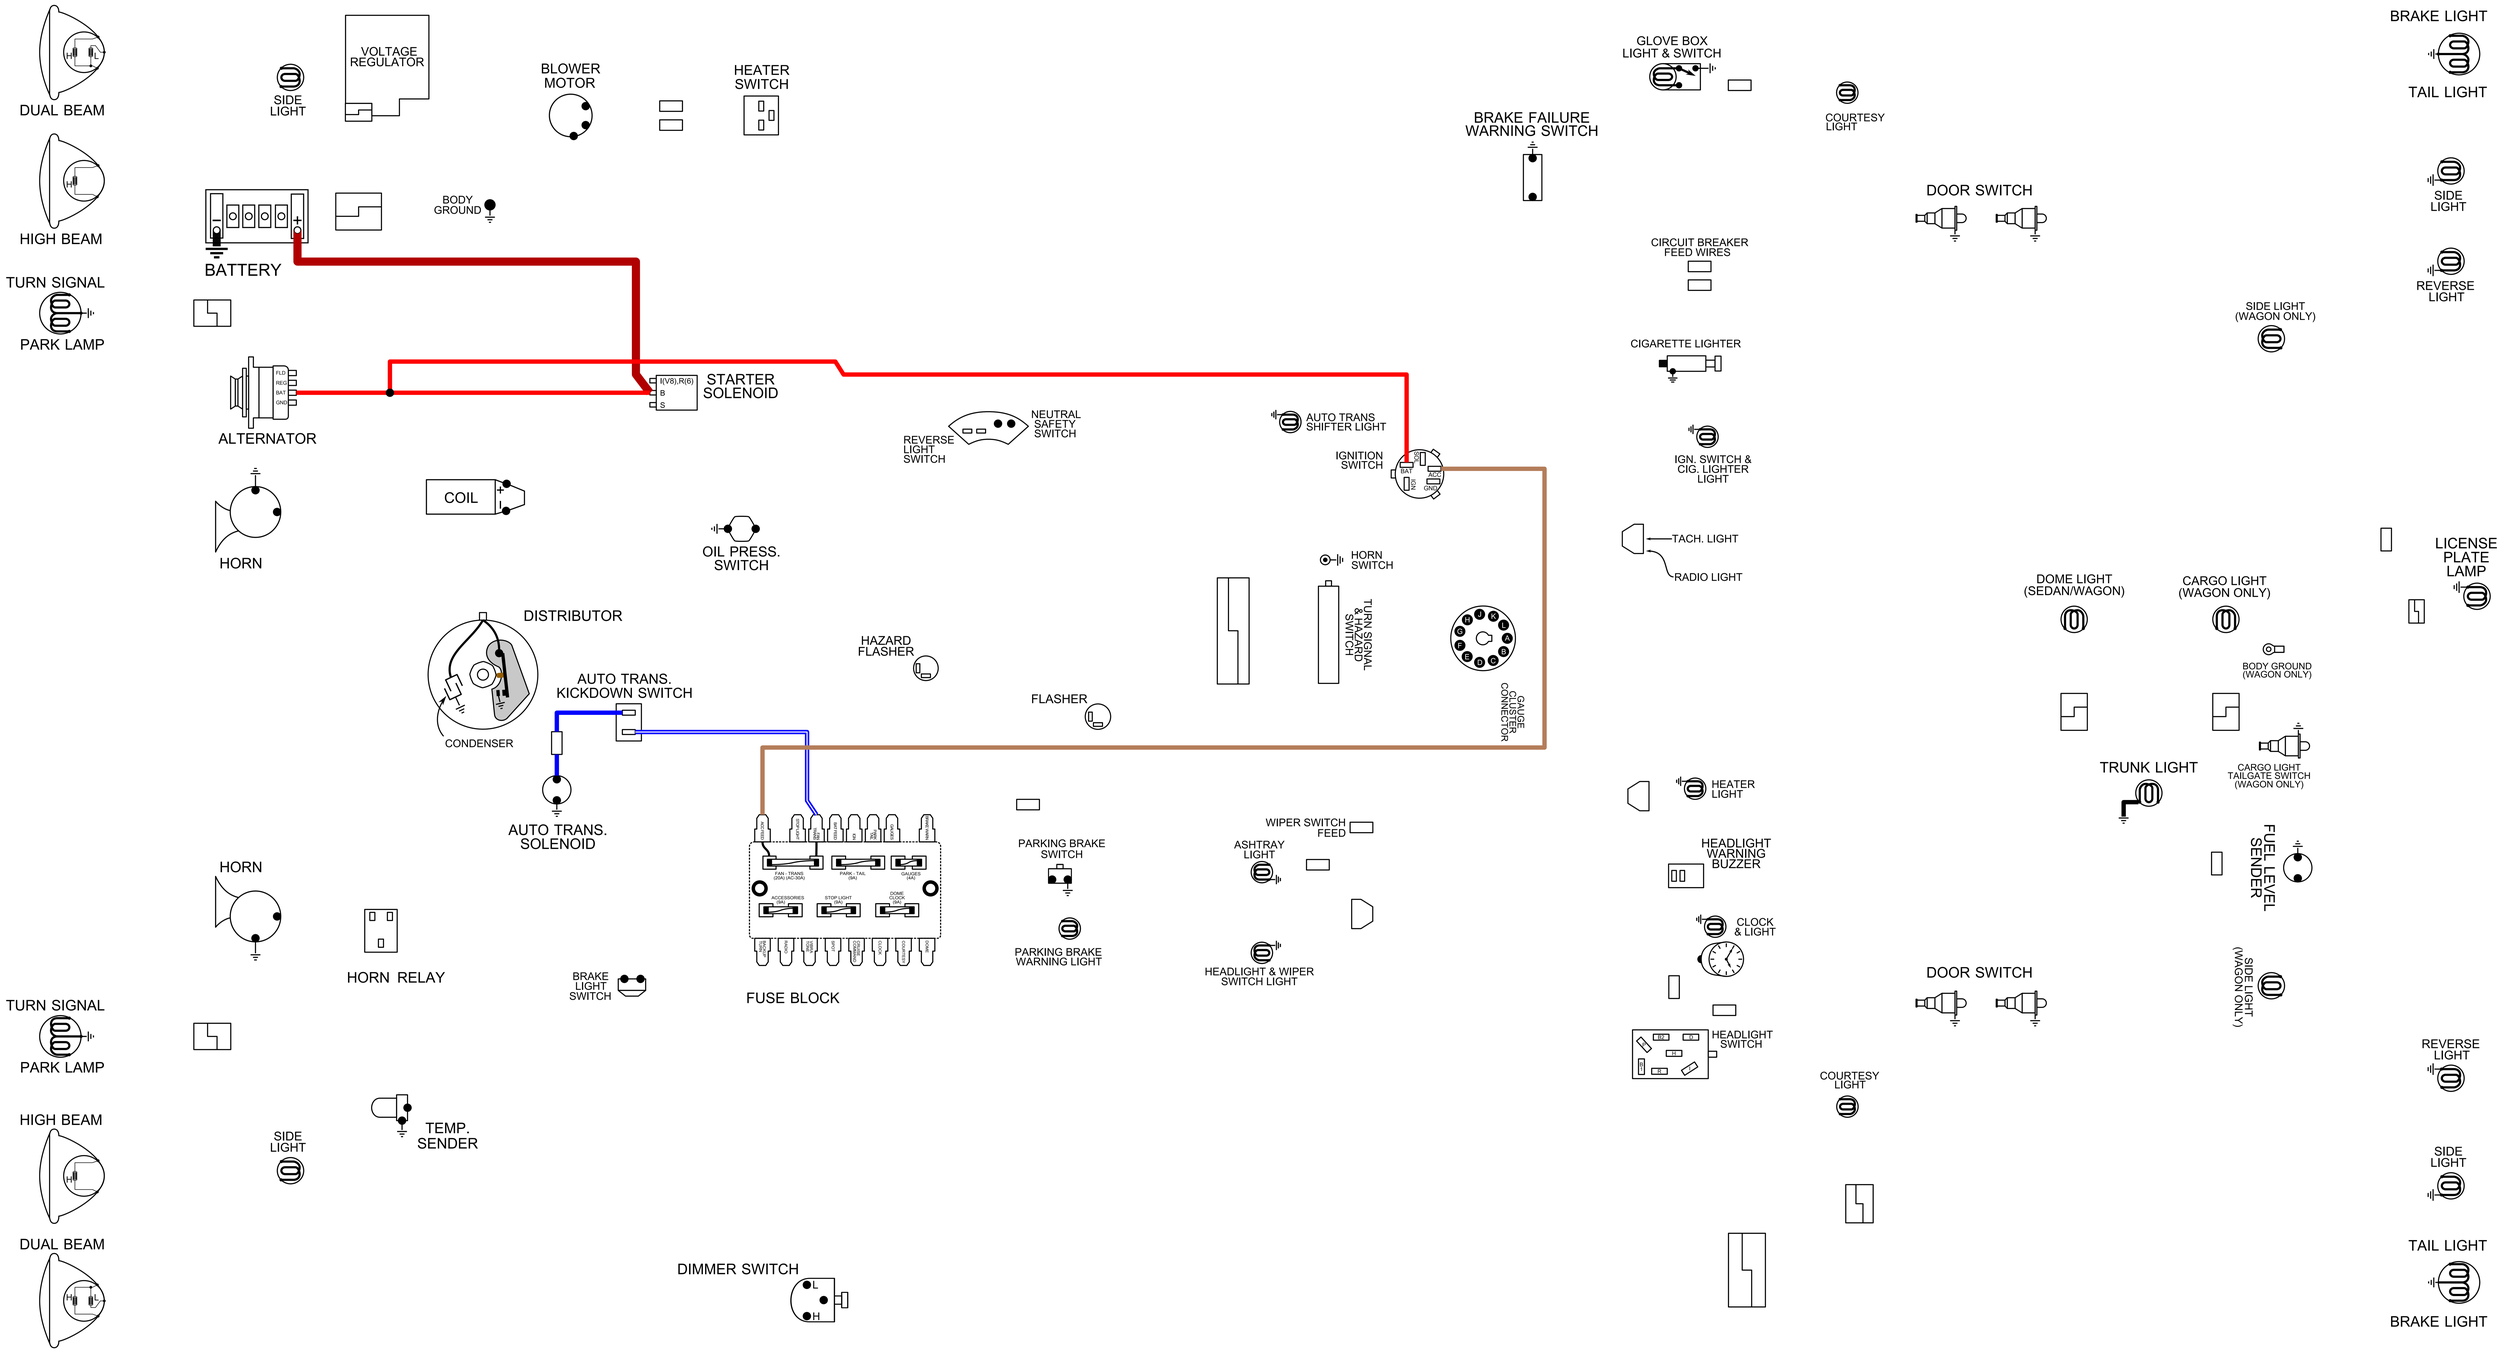

CINCO


1968 AMC MARLIN & AMBASSADOR

GAUGES & WARNING LIGHTS

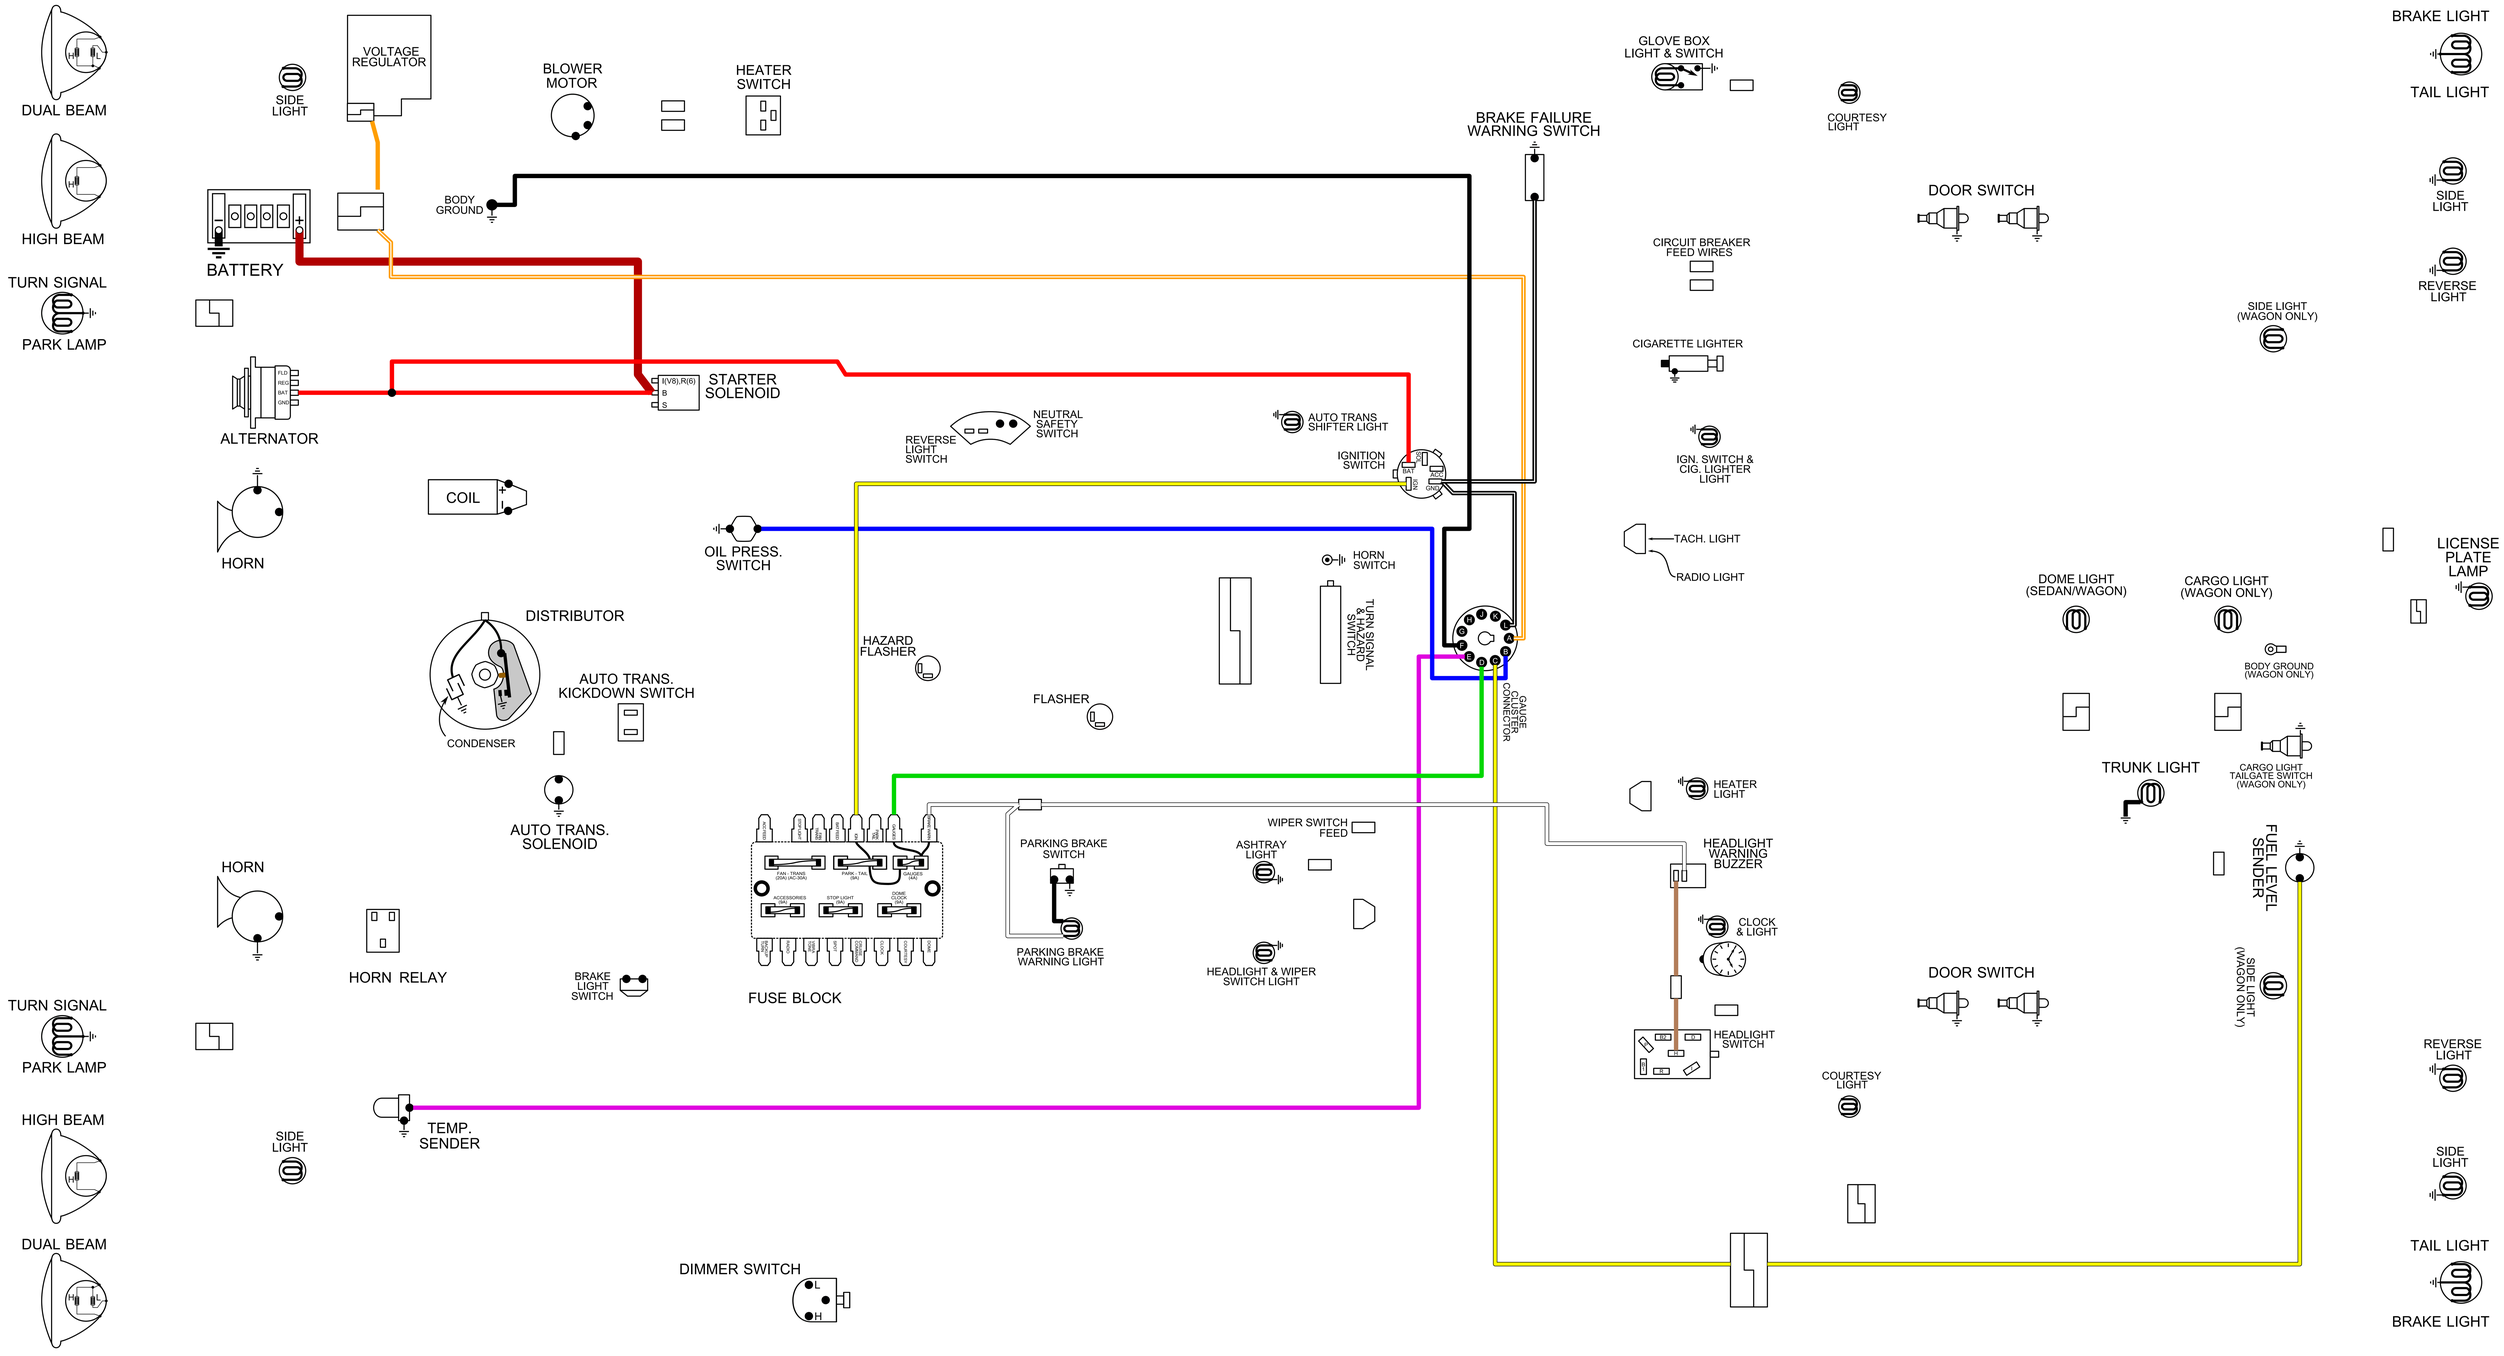

CINCO


1968 AMC MARLIN & AMBASSADOR
REVERSE LIGHTS

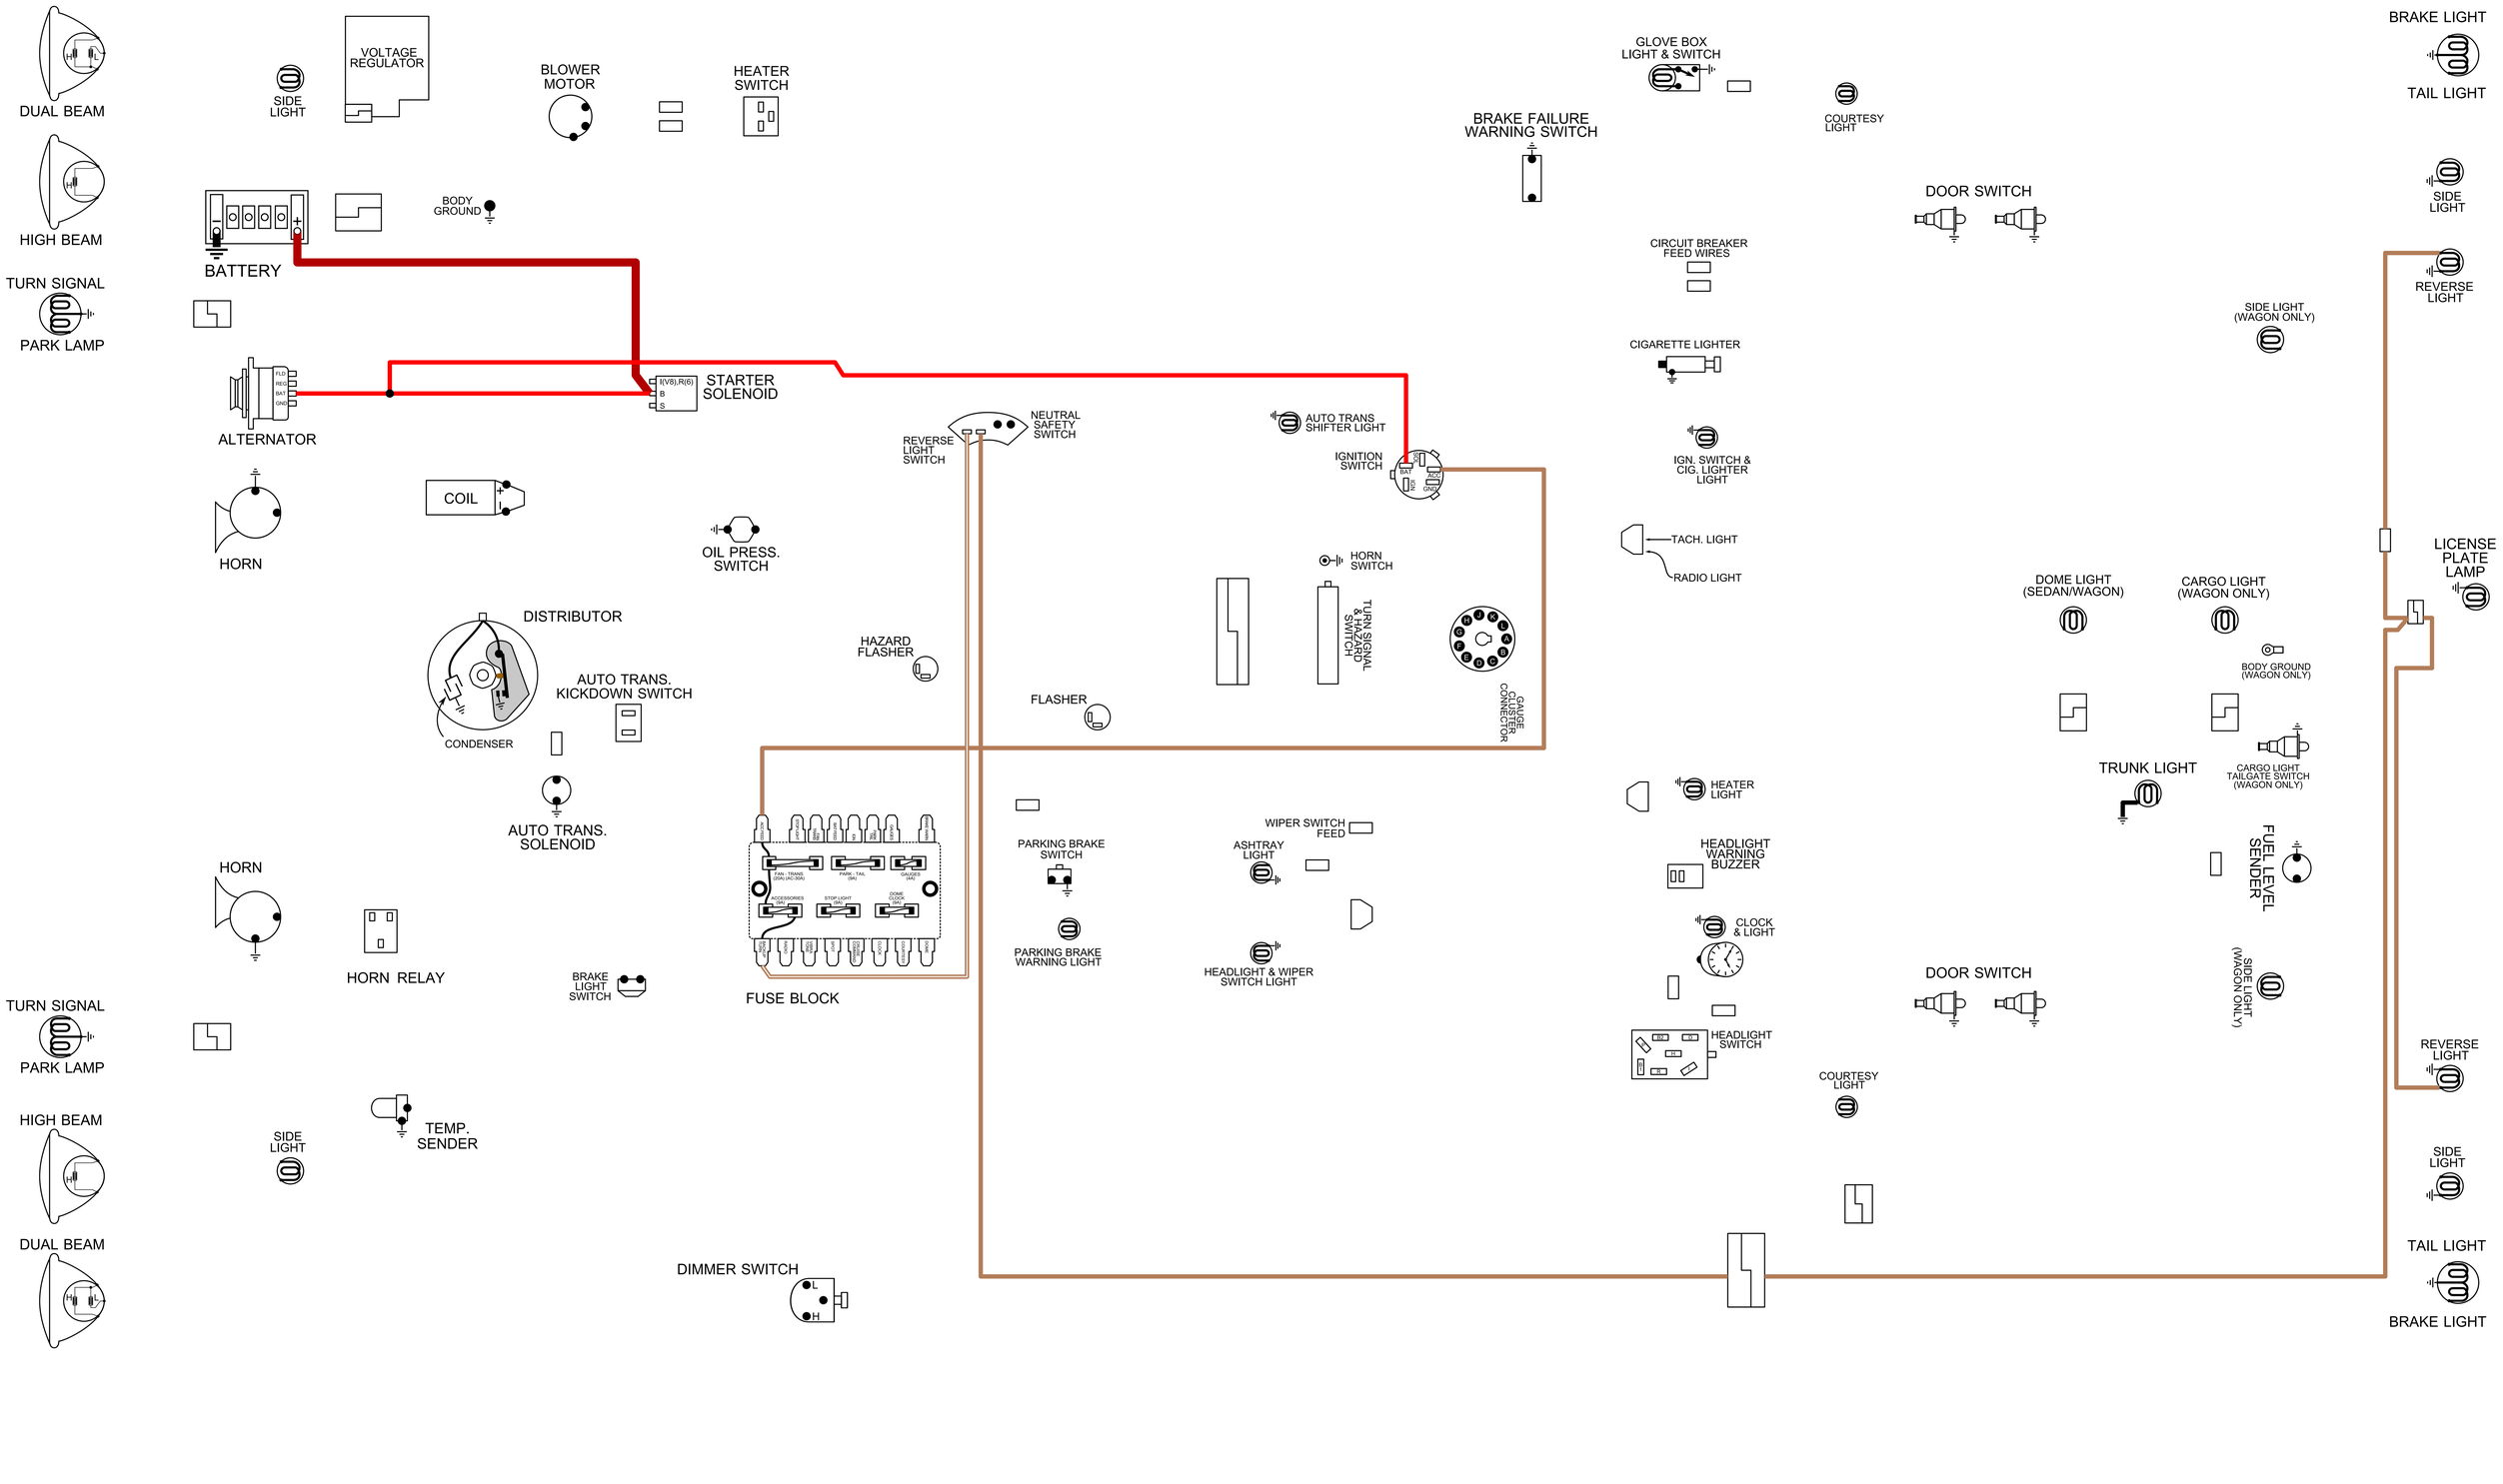

CINCO

1968 AMC MARLIN & AMBASSADOR


DOME & COURTESY LIGHTS

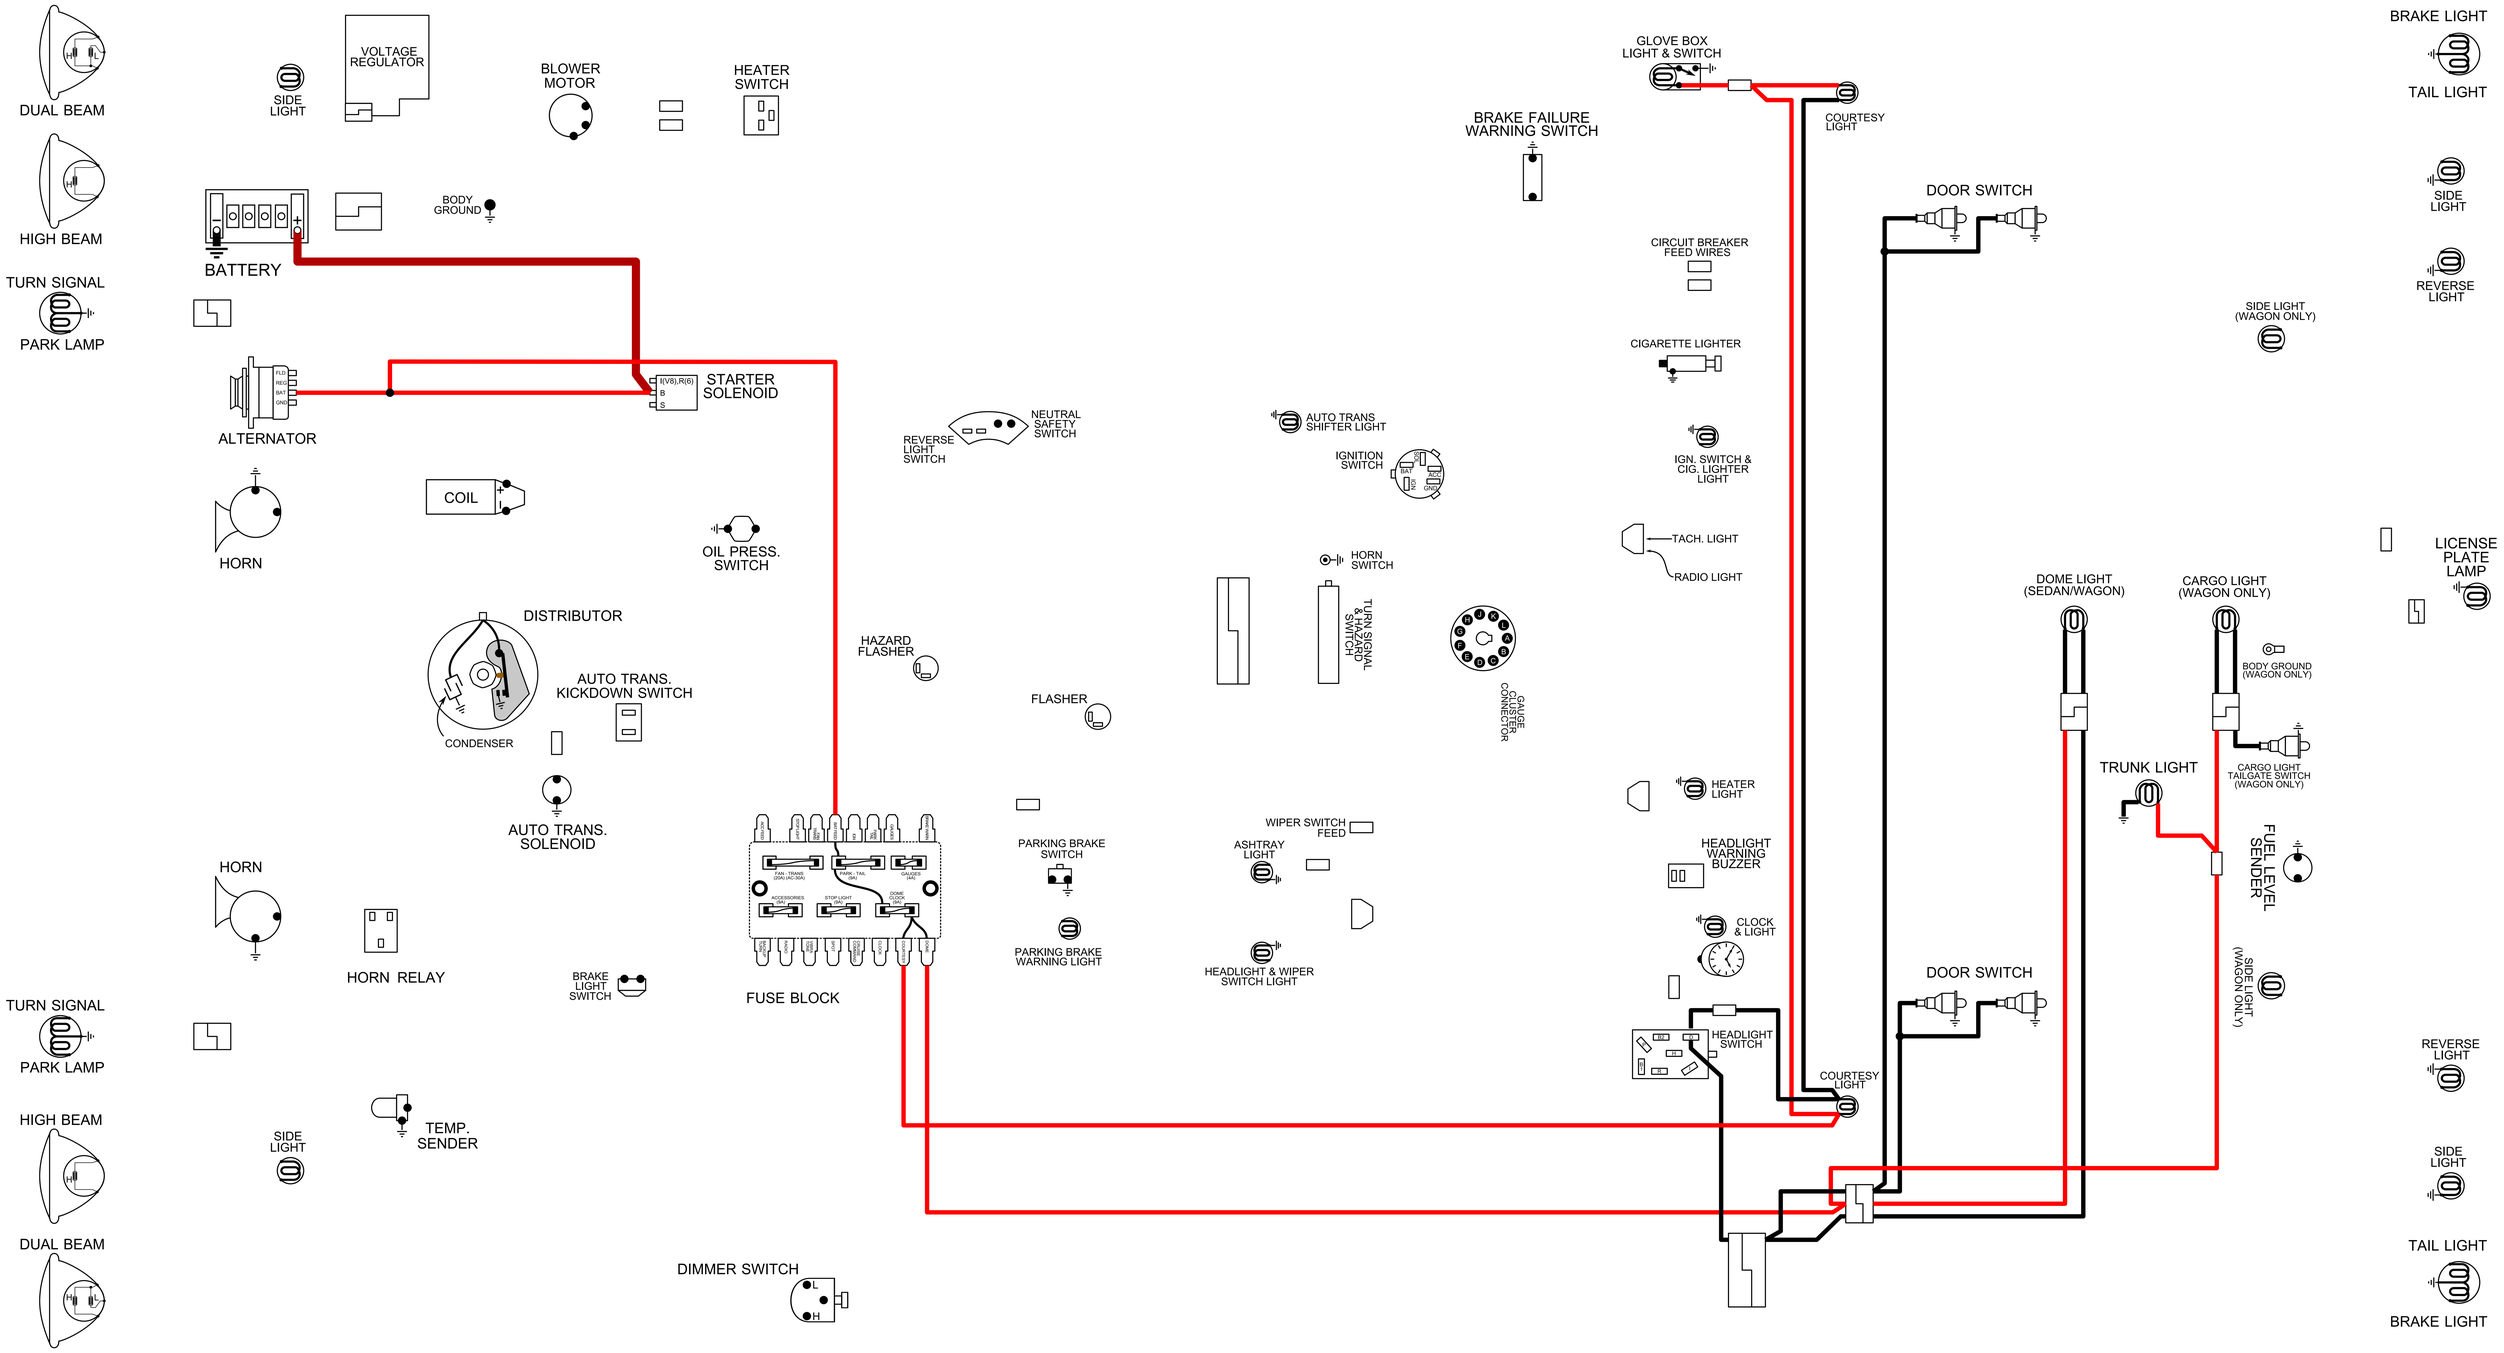

CINCO

1968 AMC MARLIN & AMBASSADOR

DASHBOARD PRINTED CIRCUIT BOARD

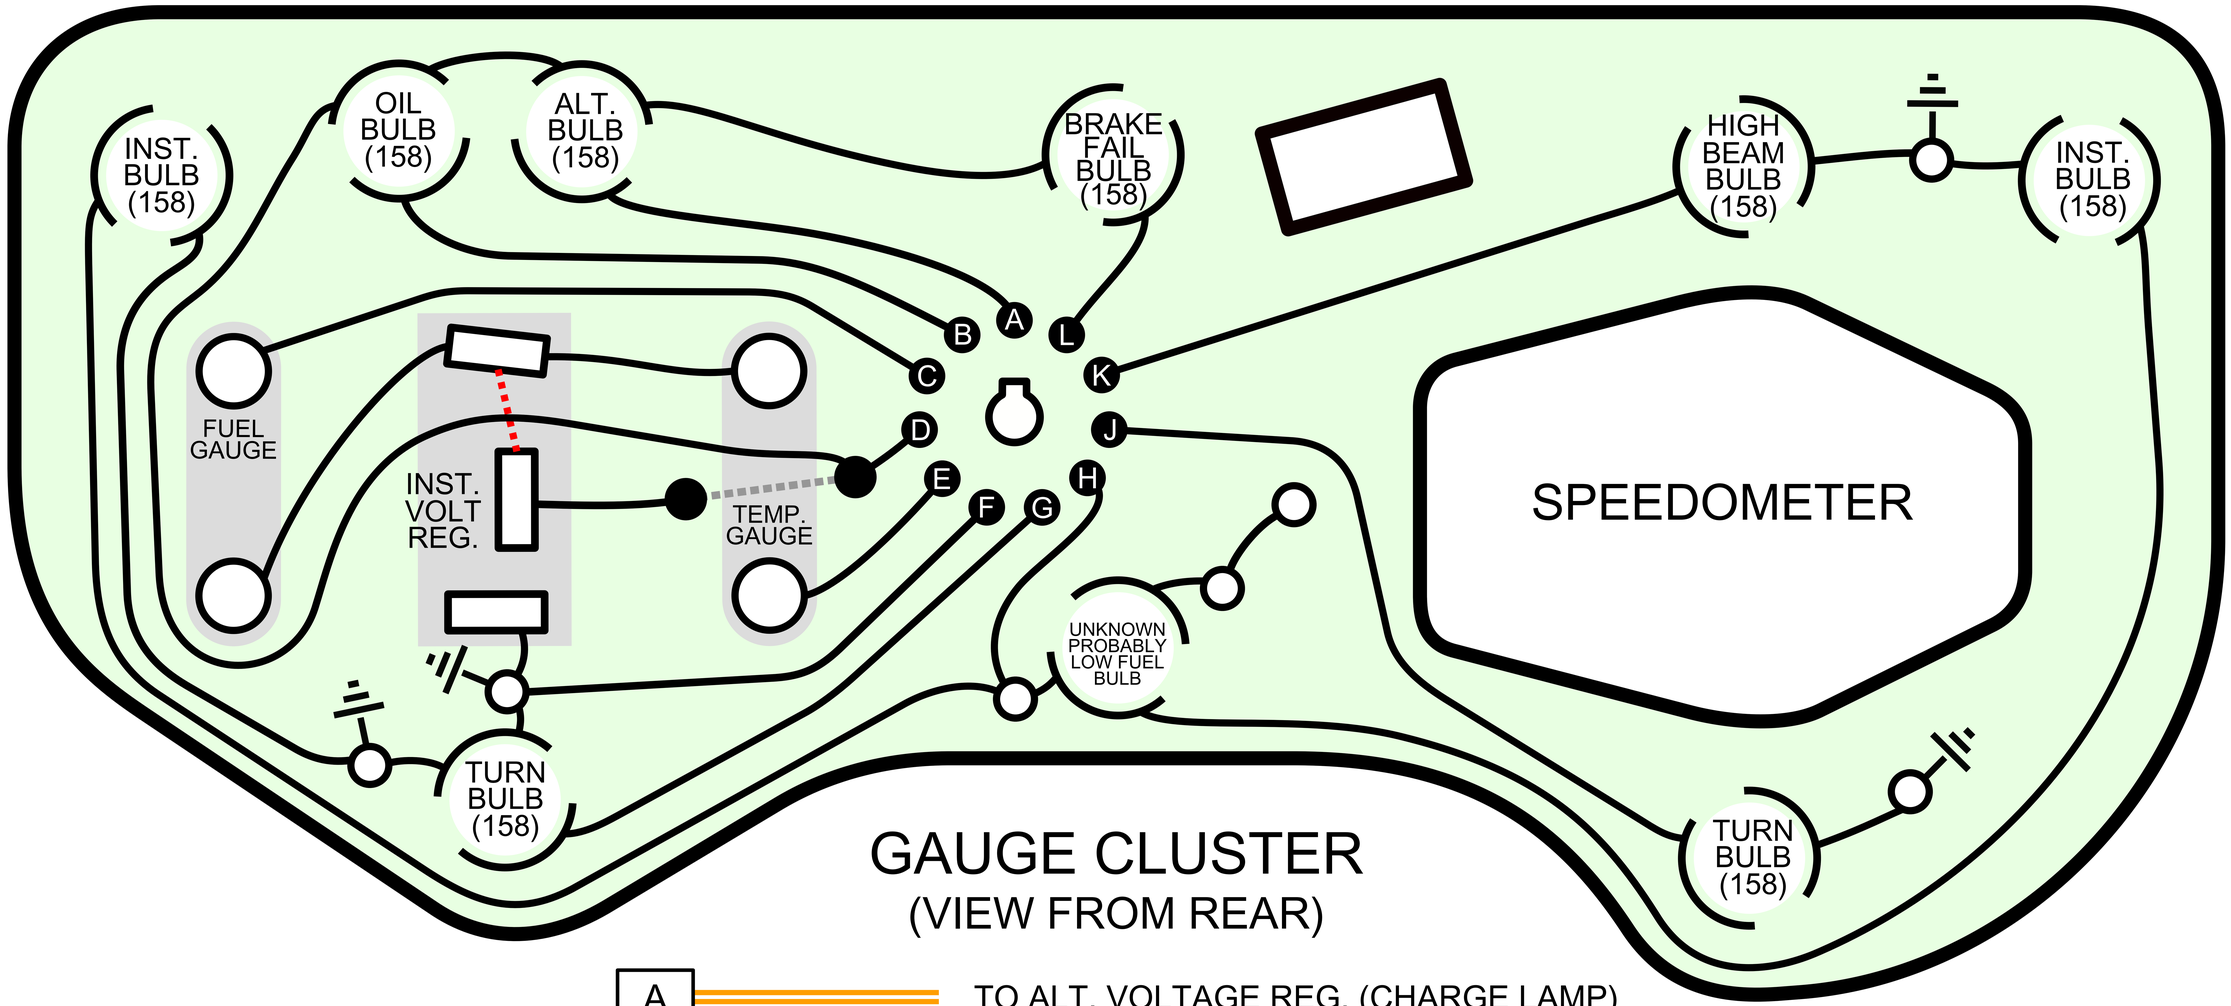

GAUGE CLUSTER

(VIEW FROM REAR)

A	TO ALT. VOLTAGE REG. (CHARGE LAMP)
B	TO OIL PRESS. SWITCH
C	TO FUEL SENDER
D	TO FUSEBOX (POWER FEED)
E	TO TEMP. SENDER
F	TO GROUND
G	TO TURN SIG. SWITCH (RIGHT)
H	TO HEADLIGHT SWITCH (INST. LIGHTS)
J	TO TURN SIG. SWITCH (LEFT)
K	TO DIMMER SWITCH (HIGH BEAM IND.)
L	TO BRAKE FAILURE SWITCH

CINCO